




INSTRUCCIONES DE INSTALACIÓN

**Bomba de calor ROOFTOP
con R-410A
17 SEER (3 - 5tons)**

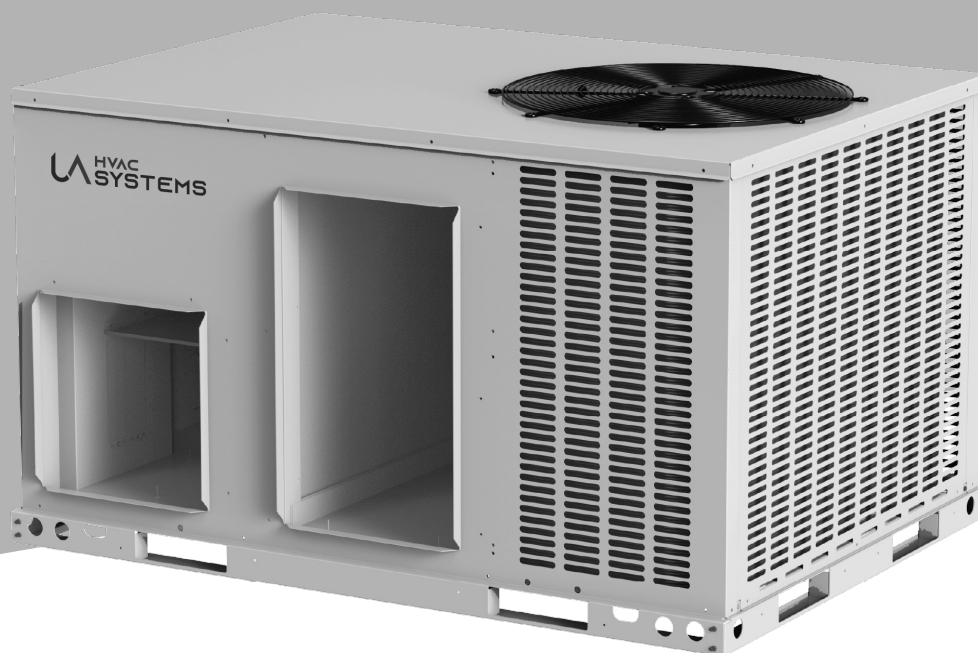

**RECONOZCA ESTE SÍMBOLO COMO UNA INDICACIÓN
DE INFORMACIÓN DE SEGURIDAD IMPORTANTE**



ADVERTENCIA

Estas instrucciones están diseñadas para ayudar al personal de servicio técnico cualificado y autorizado a instalar, ajustar y operar correctamente esta unidad. Lea estas instrucciones detenidamente antes de intentar la instalación o el funcionamiento. El incumplimiento de estas instrucciones puede resultar en una instalación, ajuste, servicio o mantenimiento inadecuados, lo que podría provocar incendios, descargas eléctricas, daños materiales, lesiones personales o la muerte.

Muchas gracias por adquirir nuestro producto.
Antes de usar su unidad, lea atentamente este manual y consérvelo para futuras consultas.
NO DESTRUYA ESTE MANUAL.



MODELOS

UADRTC036DD300E1/O

UADRTC060DD300E1/O



CONTENTS

1 KEY TO SYMBOLS AND SAFETY INSTRUCTIONS

1.1 KEY TO SYMBOLS.....	04
1.2 SAFETY.....	04

2 COMPONENT LOCATION

2.1 3 TON MODEL.....	07
2.2 5 TON MODEL.....	08

3 DIMENSIONS

3.1 3 TON MODEL.....	09
3.2 5 TON MODEL.....	11

4 INSTALLATION

4.1 PRE-INSTALLATION.....	14
4.2 RIGGING AND LIFTING.....	14
4.3 LOCATION RESTRICTION.....	14

5 AIRFLOW PERFORMANCE..... 16

6 INDOOR FAN MOTOR FUNCTION..... 17

7 DUCTWORK..... 18

8 CONDENSATE DRAIN CONNECTION

8.1 INSTALL DRAIN PIPE.....	19
-----------------------------	----

9 AIR FILTER (Not Factory-Installed)..... 19

10 ELECTRICAL WIRING

10.1 POWER WIRING.....	20
10.2 GROUNDING.....	20
10.3 CONTROL WIRING.....	20

11 START UP

11.1 SYSTEM START UP.....	23
---------------------------	----

12 ELECTRICAL WIRING

12.1 CHARGING: WEIGH-IN METHOD.....	23
12.2 SUBCOOLING CHARGING AND REFRIGERANT ADJUSTMENT IN COOLING..... (ABOVE 55°F OUTDOOR TEMP.)	23

13 INSTALLATION

13.1 CONTROL LOGIC DESCRIPTION.....	25
13.2 SENSORS (THERMISTORS/PRESSURE TRANSDUCER).....	26
13.3 DEFROST DESCRIPTION.....	26
13.4 COMPRESSOR CRANKCASE HEATER DESCRIPTION.....	26
13.5 REVERSING VALVE OPERATION.....	27
13.6 PROTECTION FUNCTIONS.....	27
13.7 FAULT CODE TABLE.....	27
13.8 PARAMETER POINT CHECK TABLE.....	28
13.9 CONTROL BOARD OVERVIEW.....	29
13.10 ERROR CODE TROUBLESHOOTING (ODU).....	32
13.11 ERROR CODE TROUBLESHOOTING (IDU).....	38
13.12 TEMPERATURE AND RESISTANCE RELATIONSHIP TABLES (FOR SENSORS)...	39
13.13 TEMPERATURE AND RESISTANCE RELATIONSHIP TABLES (FOR TF).....	40
13.14 WIRING DIAGRAM.....	41

14 MAINTENANCE

14.1 CLEANING PRECAUTIONS.....	43
14.2 REGULAR MAINTENANCE.....	43

1 KEY TO SYMBOLS AND SAFETY INSTRUCTIONS

1.1 Key to Symbols



Warnings in this document are identified by a warning triangle. Keywords at the start of a warning indicate the type and seriousness of the ensuing risk if measures to prevent the risk are not taken.



This symbol indicates important information where there is no risk to people or property.

The following keywords are defined and can be used in this document:

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION indicates a hazardous situation which, if not avoided, could result in minor to moderate injury.

NOTICE is used to address practices not related to personal injury.

1.2 Safety

Please read before proceeding

NOTE

This document contains a wiring diagram and service information.

This is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

WARNING

HIGH VOLTAGE

- Failure to follow this warning could result in property damage, severe personal injury, or death.
- WAIT THREE (3) MINUTES after disconnecting power prior to touching electrical components as they may hold a dangerous charge of 380 VDC, then verify DC Voltage is less than 42VDC at inverter TEST POINTS P-N.

NOTICE

- This document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.
- These instructions do not cover all variations in systems or provide for every possible contingency to be met in connection with the installation.
- Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to your installing dealer or local distributor.

WARNING

This information is intended for use by individuals possessing adequate backgrounds of electrical and mechanical experience. Any attempt to repair a central air conditioning product may result in personal injury and/or property damage.

WARNING

ELECTRICAL SHOCK

- Failure to follow this warning could result in property damage, severe personal injury, or death.
- Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/ tagout procedures to ensure the power cannot be inadvertently energized.

WARNING

PERSONAL INJURY/ENVIRONMENTAL HAZARD

Any attempt to repair a central air conditioning product may result in property damage, severe personal injury, or death. These units use R-410A refrigerant which operates at 50 to 70% higher pressures than R-22. Use only R-410A approved service equipment. Refrigerant cylinders are painted a "Rose" color to indicate the type of refrigerant and may contain a "dip" tube to allow for charging of liquid refrigerant into the system. All R-410A systems with variable speed compressors use a POE oil (VG74 or equivalent) that readily absorbs moisture from the atmosphere. To limit this 'hygroscopic' action, the system should remain sealed whenever possible. If a system has been open to the atmosphere for more than 4 hours, the compressor oil must be replaced. Never break a vacuum with air and always change the driers when opening the system for component replacement.

CAUTION

HOT SURFACE

Do not touch top of compressor. May cause minor to severe burning. Failure to follow this Caution could result in property damage or personal injury.

HIGH PRESSURE

Failure to follow proper procedures can result in personal illness or injury or severe equipment damage. System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening system.

BURN HAZARD

Failure to follow this warning will result in abrupt release of system charge and may result in personal injury and/or property damage. Extreme caution should be exercised when applying gauges to service ports.

WARNING

GROUNDING REQUIRED

Failure to inspect or use proper service tools may result in equipment damage or personal injury. Reconnect all grounding devices. All parts of this product that are capable of conducting electrical current are grounded. If grounding wires, screws, straps, clips, nuts, or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

ELECTRICAL SHOCK

Failure to follow this warning could result in property damage, severe personal injury, or death. Grounding is essential before connecting electrical supply.

WARNING

This product can expose you to chemicals including Lead and Lead components, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

NOTICE

A manufactured (mobile) home installation must conform with the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, or when this Standard is not applicable, the Standard for Manufactured Home Installations (Manufactured Home Sites, Communities and Set-Ups), ANSI/NCS A225.1, and/or MH Series Mobile Homes, CAN/CSA Z240.

2 COMPONENT LOCATION

2.1 3 Ton Model

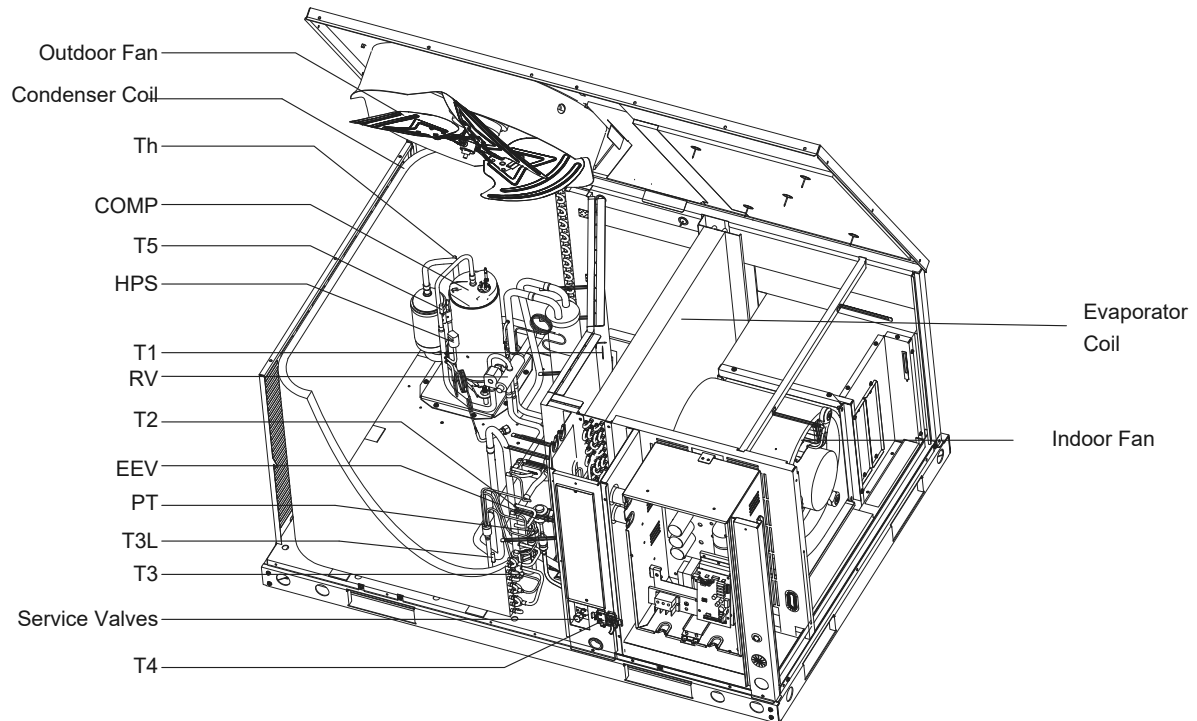


Figure 2-1

Component	Dimensions	Component	Dimensions
HPS	High pressure switch	T3L	Condensor outlet temp. sensor
PT	Pressure transducer	Tf	Radiator temp. sensor
T1	Return air temp. sensor	Th	Comp. return temp. sensor
T2	Indoor coil temp. sensor	EEV	Electronic expansion valve
T3	Condenser temp. sensor	RV	Reversing valve
T4	Ambient temp. sensor	COMP	Compressor
T5	Comp. discharge temp. sensor	FP	Fusible Plug

Table 2-1 Component Descriptions

2.2 5 Ton Model


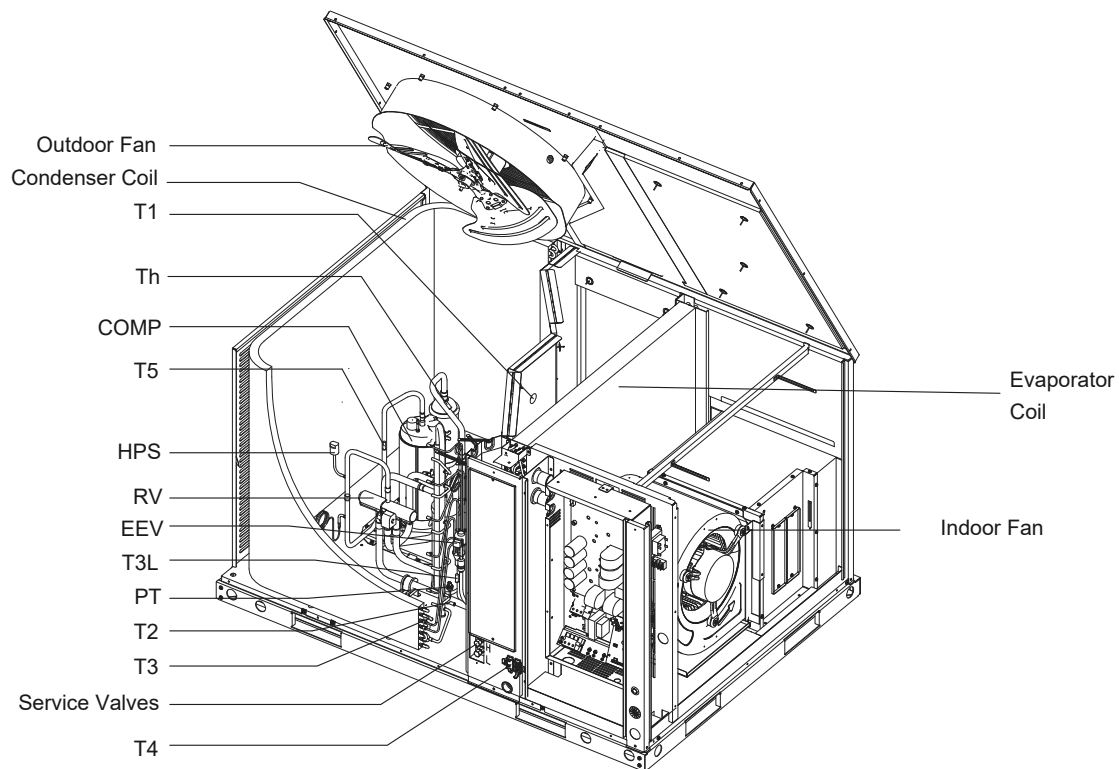


Figure 2-2

Component	Dimensions	Component	Dimensions
HPS	High pressure switch	T3L	Condensor outlet temp. sensor
PT	Pressure transducer	Tf	Radiator temp. sensor
T1	Return air temp. sensor	Th	Comp. return temp. sensor
T2	Indoor coil temp. sensor	EEV	Electronic expansion valve
T3	Condenser temp. sensor	RV	Reversing valve
T4	Ambient temp. sensor	COMP	Compressor
T5	Comp. discharge temp. sensor	FP	Fusible Plug

Table 2-2 Component Descriptions

 3.1.1 Unit Dimensions



Heat Pump Model	L	W	H
3 Ton Model	52"	37-3/4"	24-13/16"

Table 3-1 3 Ton Unit Dimensions

Heat Pump Model	Net Weight	Gross Weight
3 Ton Model	316 lbs (143kg)	322 lbs (146kg)

Table 3-2 3 Ton Unit Dimensions

3.1.2 Dimensions - Back and Bottom

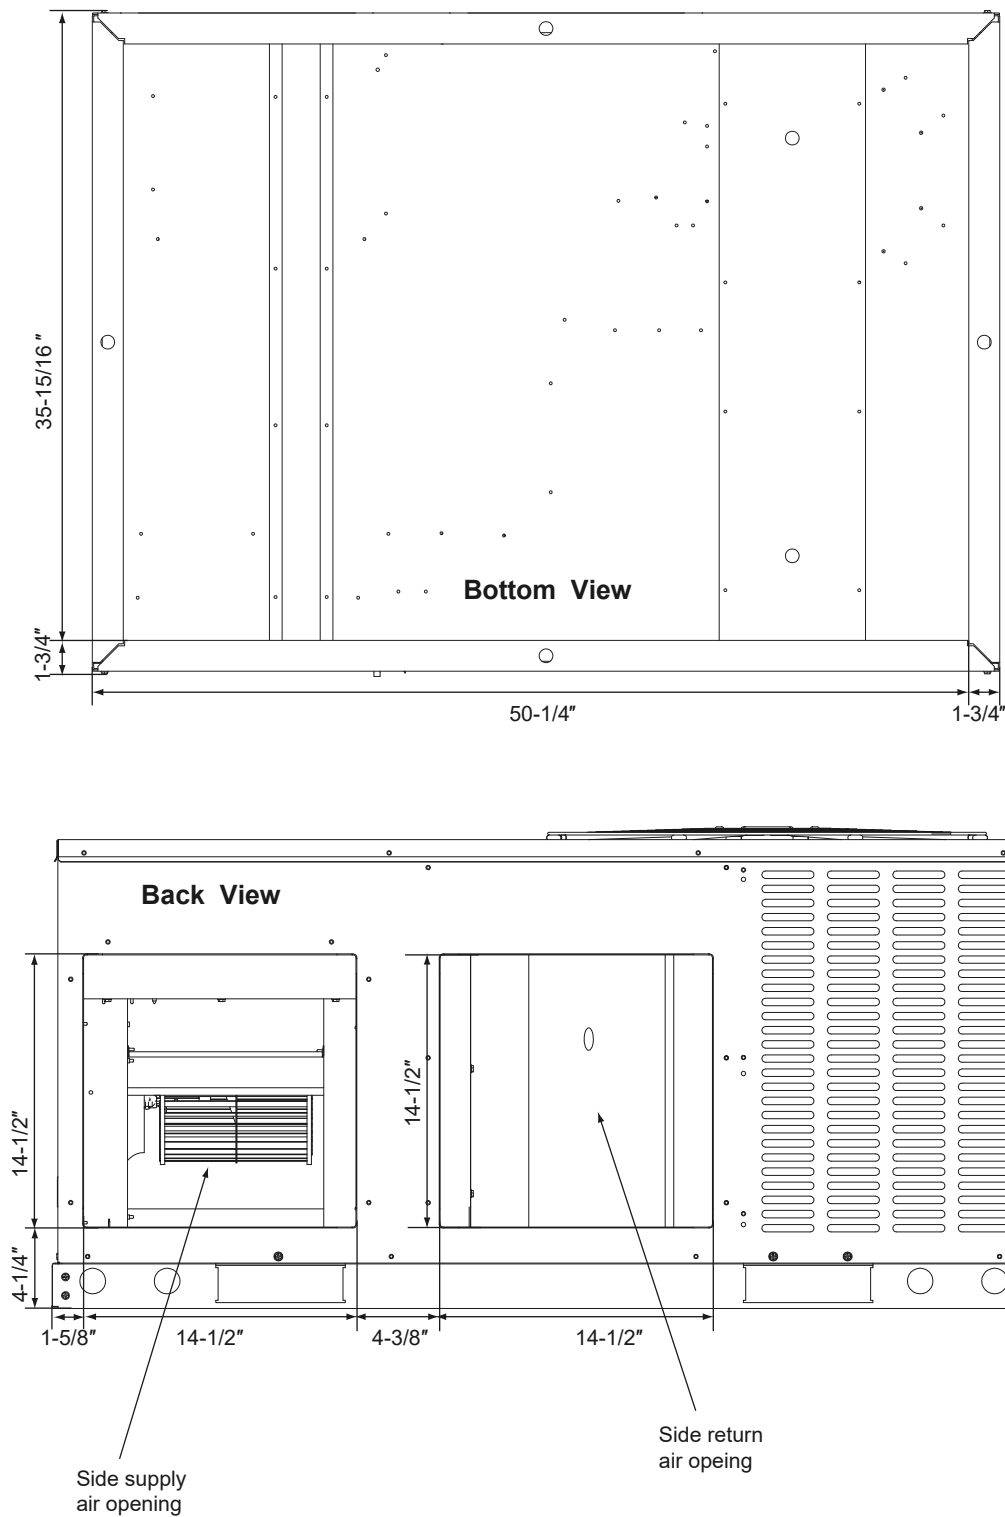


Figure 3-2

3.1.3 Dimensions - Left and Top

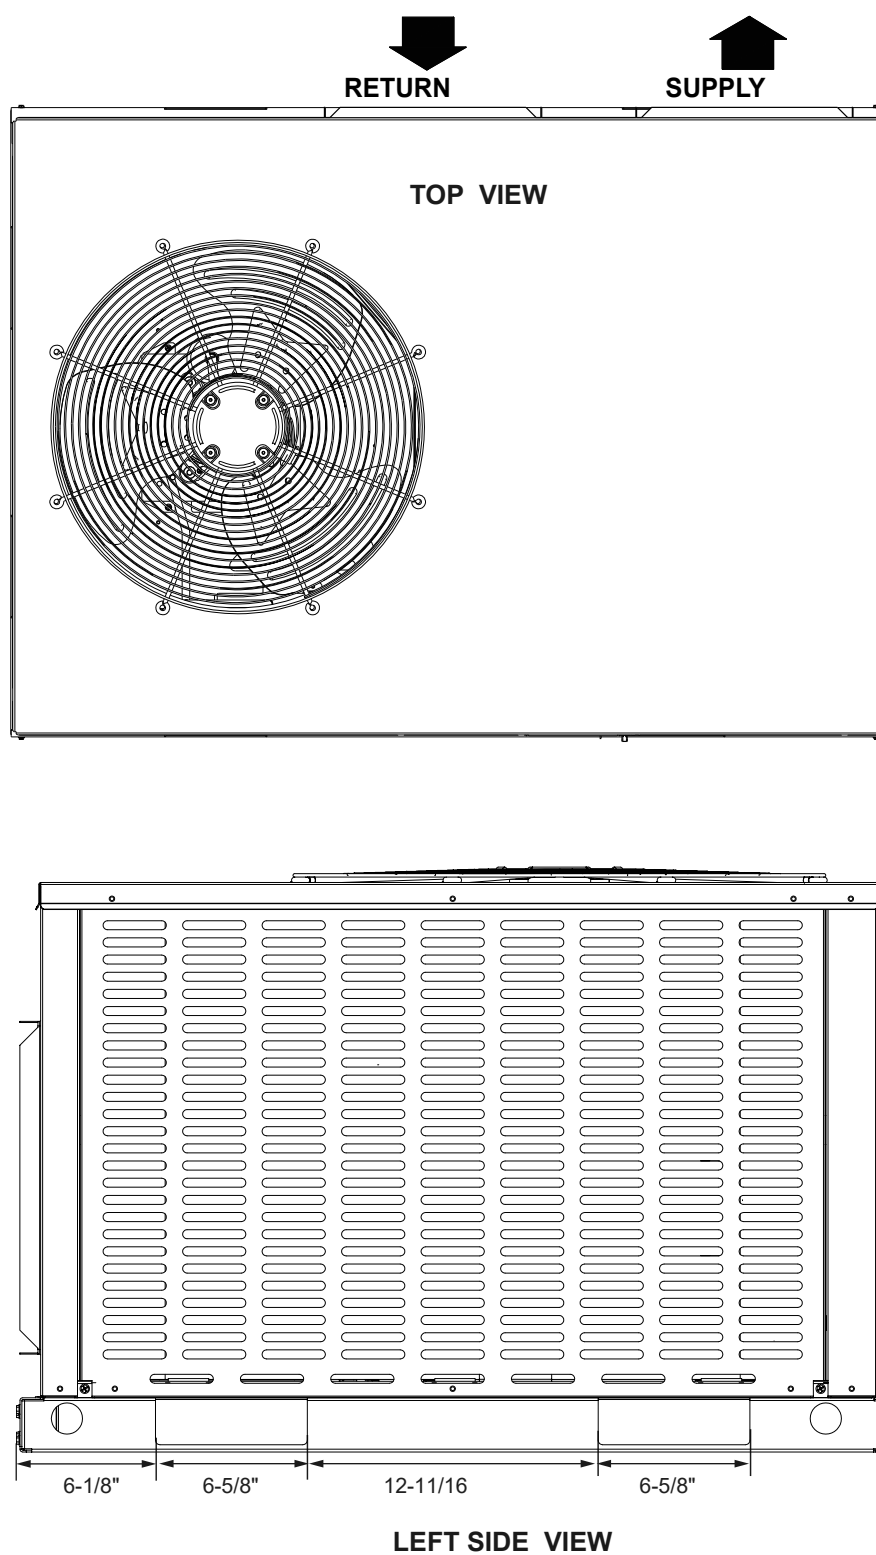


Figure 3-3

3.2 5 Ton Model

3.2.1 Unit Dimensions

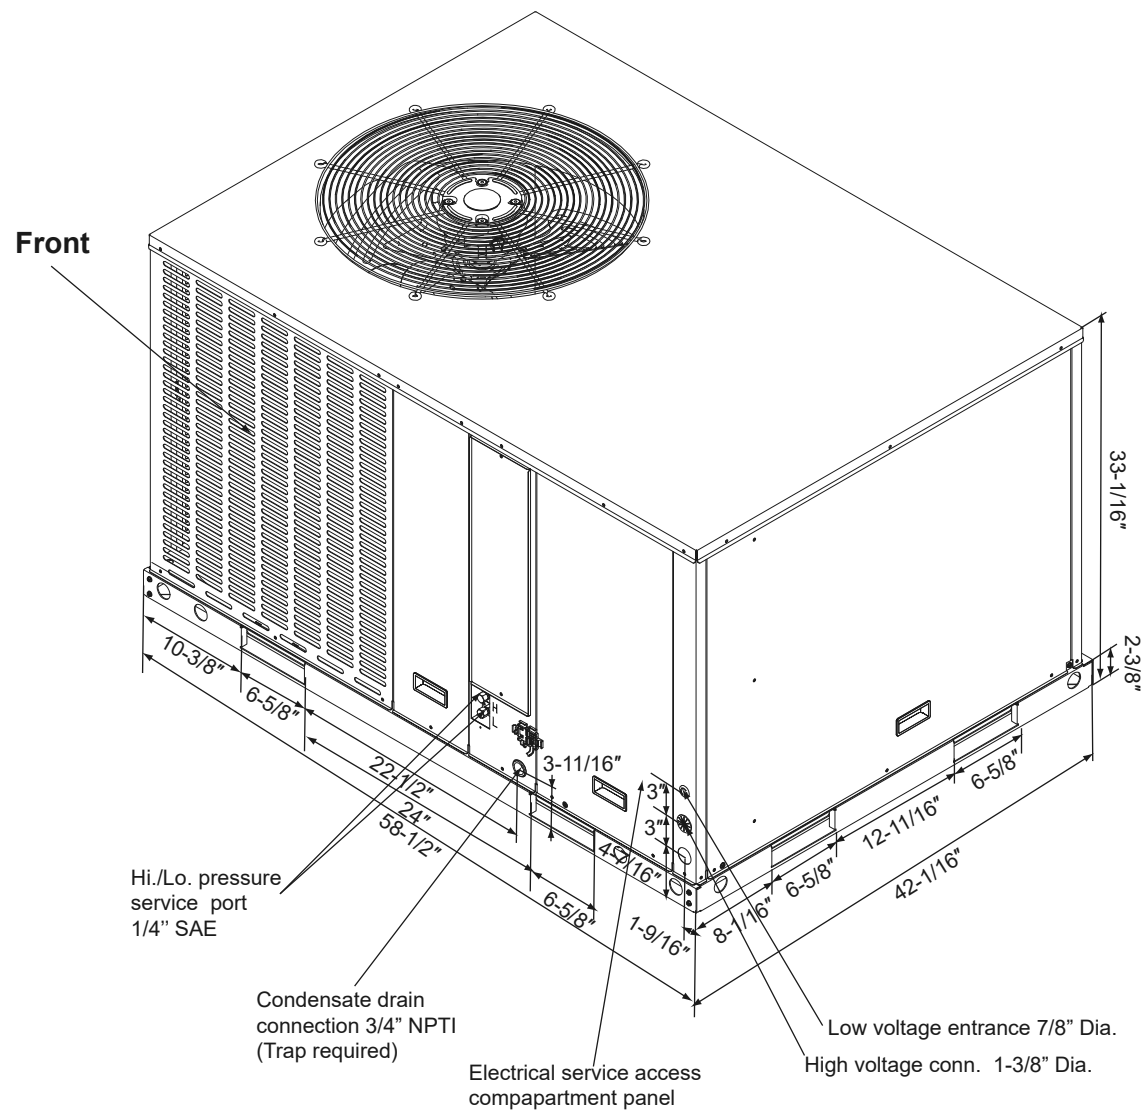


Figure 3-4

Heat Pump Model	L	W	H
5 Ton Model	58-1/2"	42-1/16"	33-1/16"

Table 3-3 5 Ton Unit Dimensions

Heat Pump Model	Net Weight	Gross Weight
5 Ton Model	427 lbs (194kg)	436 lbs (198kg)

Table 3-4 5 Ton Unit Dimensions

3.2.2 Dimensions - Back and Bottom

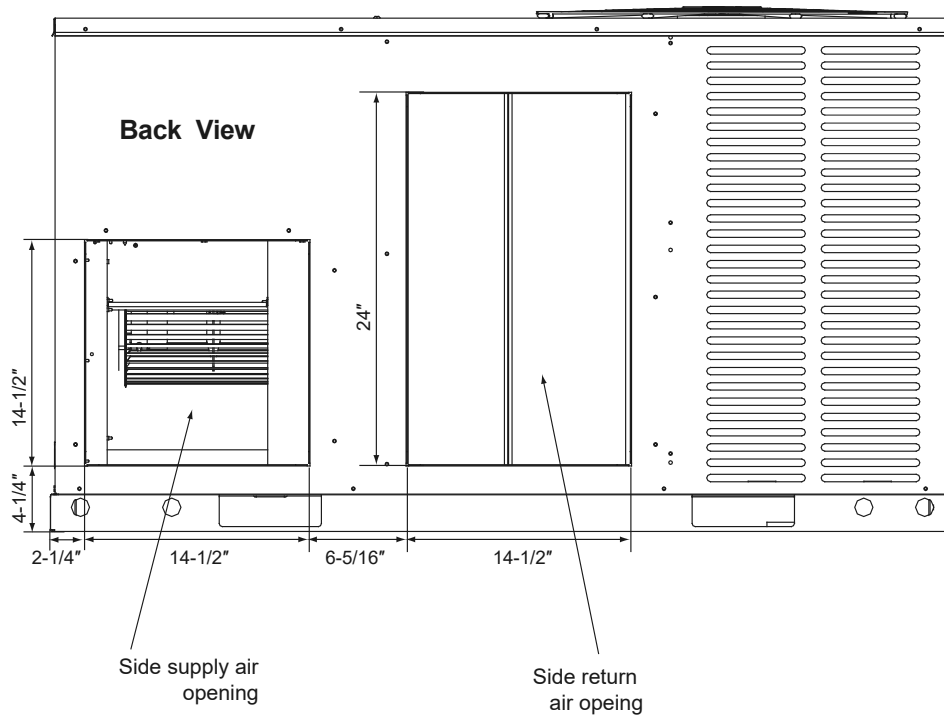
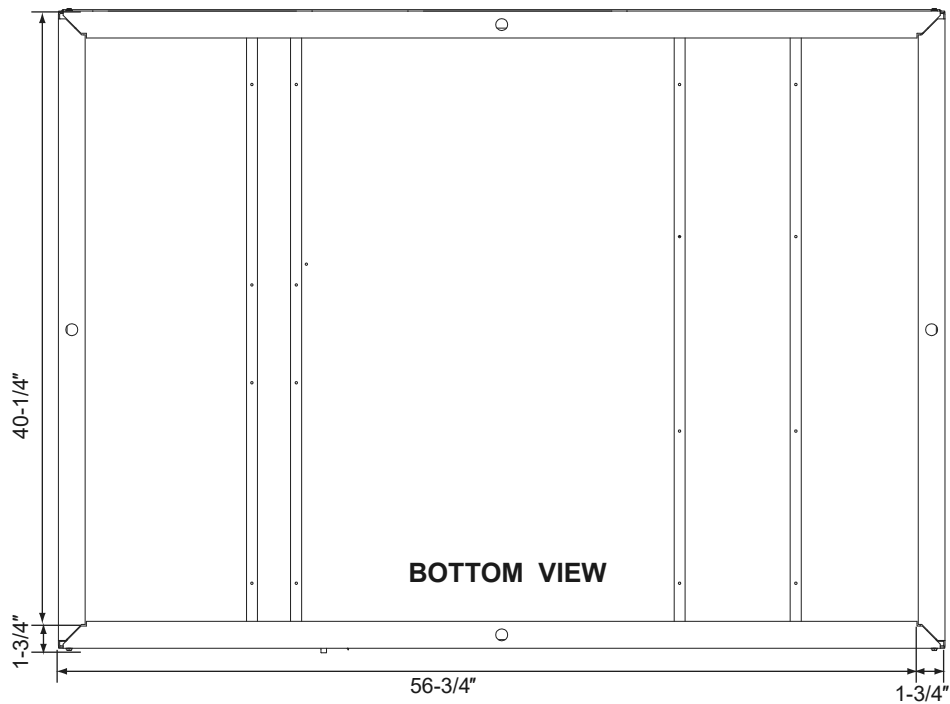


Figure 3-5

3.2.3 Dimensions - Left and Top

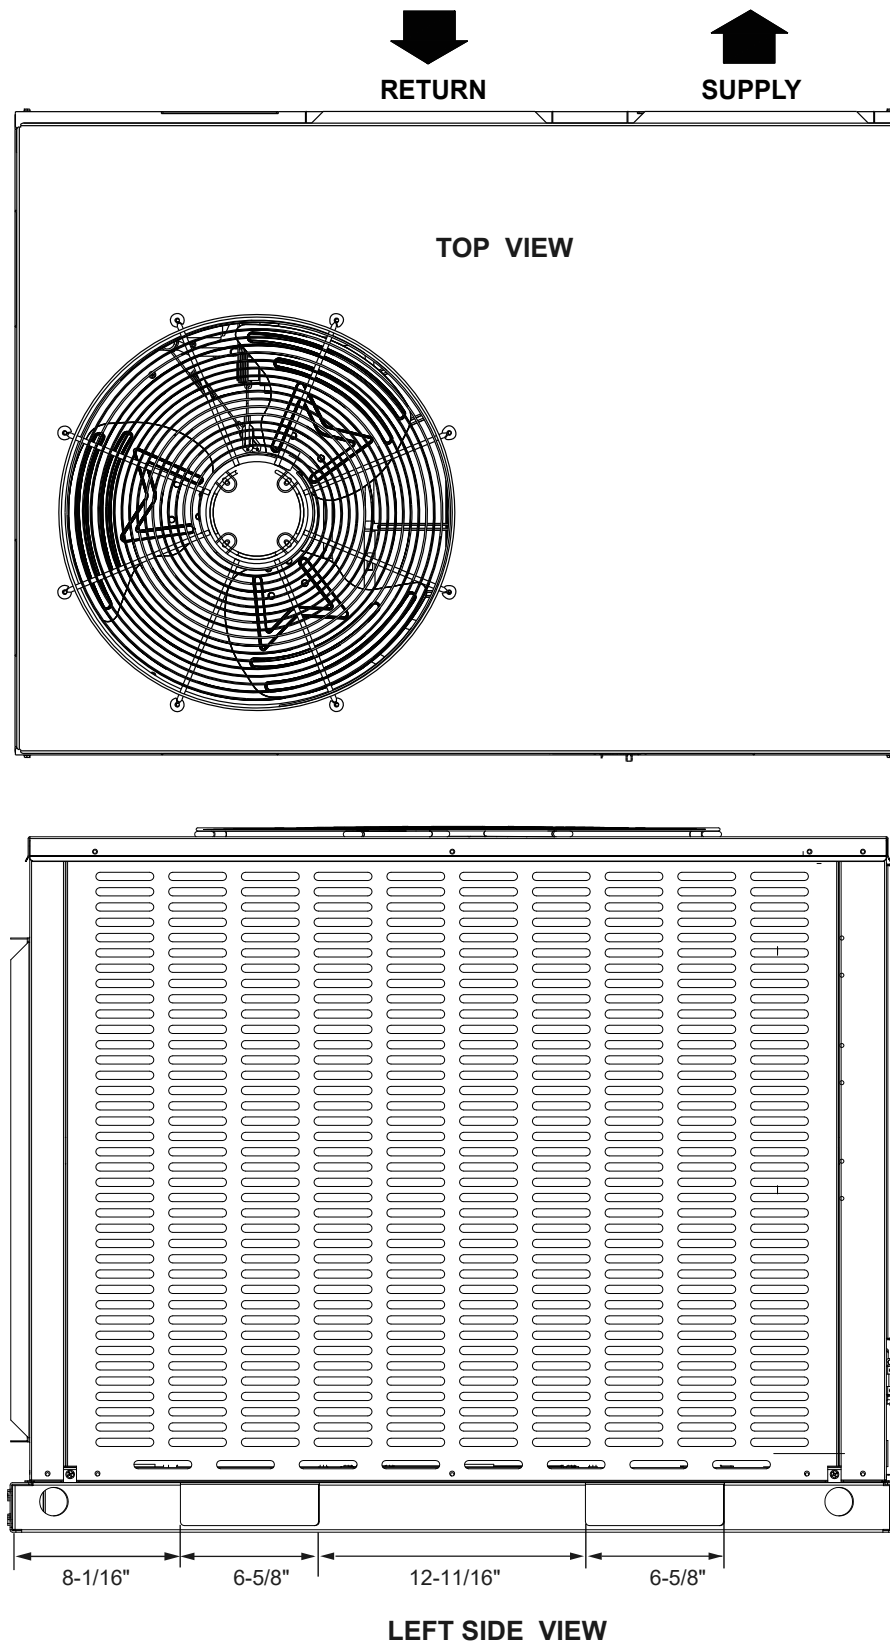


Figure 3-6

4 INSTALLATION

4.1 Pre-Installation

Before installation, carefully check the following:

1. Unit should be installed in accordance with national and local safety codes, including but not limited to ANSI/NFPA No. 70, local plumbing and wastewater codes and any other applicable codes.
2. For rooftop installation, be sure the structure has enough strength to support the weight of unit. Unit must be installed on a field supplied roof curb or rack and leveled.
3. For ground level installation, a field supplied level slab must be used.
4. Condenser airflow should not be restricted.
5. On applications when a roof curb is used, the unit must be positioned on the curb so the front of the unit is tight against the curb.

4.2 Rigging and Lifting

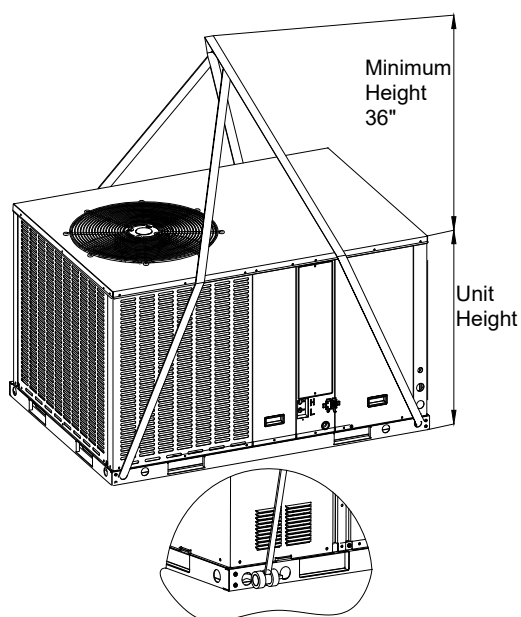


Figure 4-1

Exercise care when moving the unit. Do not remove any packaging until the unit is near the place of installation. Rig the unit by attaching chain or cable slings to the lifting holes provided in the base rails. Spreader bars, whose length exceeds the largest dimension across the unit, MUST be used across the top of the unit.

When rigging/lifting the unit, the minimum height between the top of the rigging cables' connection point and top of unit should be 36 inches. Refer to Figure 3-1.

⚠ CAUTION

Before lifting, make sure the unit weight is distributed equally on the rigging cables so it will lift evenly.

⚠ CAUTION

All panels must be secured in place when the unit is lifted. The condenser coils should be protected from rigging cable damage with plywood or other suitable material.

4.3 Location Restrictions

Ensure the top discharge area is unrestricted for at least 60 inches above the unit.

Do not locate outdoor unit near bedrooms since normal operational noise levels may be disturbing to building occupants.

Position unit to allow adequate space for unobstructed airflow, wiring, and serviceability.

Do not restrict outdoor airflow. An air restriction at either the outdoor air inlet or the fan discharge may be detrimental to compressor life.

Do not place the unit where water, ice, or snow from an overhang or roof will damage or flood the unit. Do not install the unit on carpeting or other combustible materials. Slab-mounted units should be at least 2 inches (51 mm) above the highest expected water and runoff levels. Do not use unit if it has been under water.

Maintain a distance of 24 inches between units. Position unit so water, snow, or ice from roof or overhang cannot fall directly on unit.

See Figure 4-3 and Figure 4-4 for minimum clearance requirements.

Cold climate considerations (heat pump only)

NOTICE

Precautions must be taken for units being installed in areas where snow accumulation and prolonged below-freezing temperatures occur.

- Units should be elevated 3-12 inches above the pad or rooftop, depending on local weather. This additional height will allow drainage of snow and will permit condensate water to drain when the unit is in defrost mode. Ensure that drain holes in unit base pan are unobstructed, preventing drainage of defrost water (See Figure 4-5).
- If possible, avoid locations that are prone to snow drifts. If not possible, a snow drift barrier should be installed around the unit to prevent a build-up of snow on the sides of the unit.

NOTE

Ensure that Condensate Drain side is pitched lower than the opposite side (see Figure 4-2).

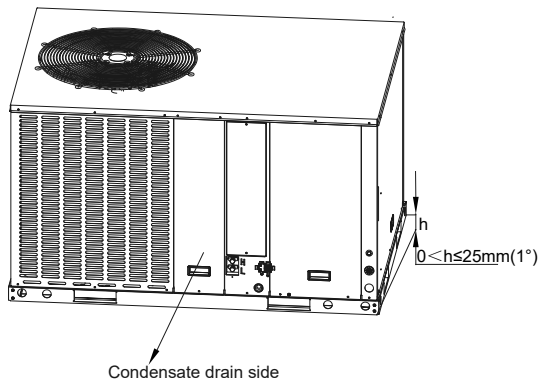


Figure 4-2

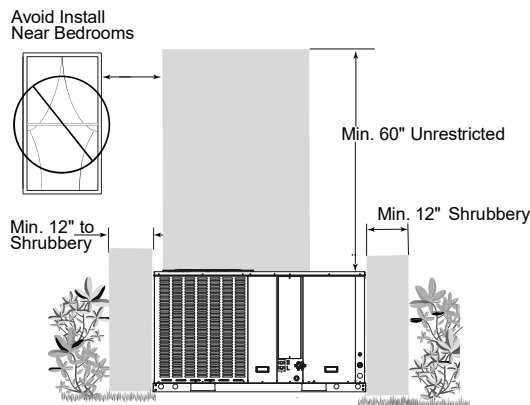


Figure 4-3

NOTE

A minimum clearance of 24" should be maintained adjacent to all access/service panels. Refer to local code requirements for additional clearance requirements.

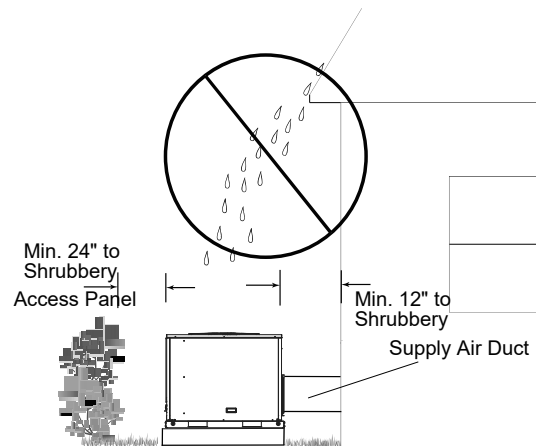


Figure 4-4

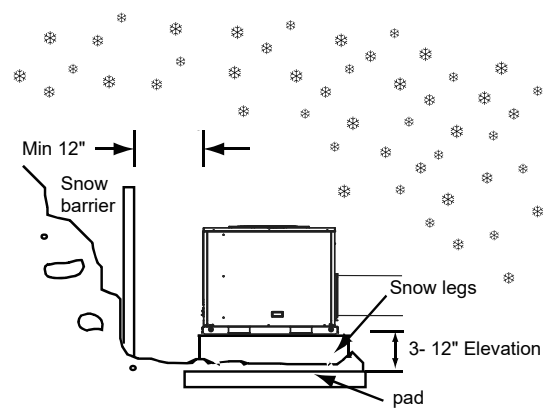


Figure 4-5

Corrosive Environment

Exposure to a corrosive environment may shorten the life of the equipment, corrode metal parts, and/or negatively affect unit performance. Corrosive elements include, but are not limited to: sodium chloride, sodium hydroxide, sodium sulfate, and other compounds commonly found in ocean water, sulfur, chlorine, fluorine, fertilizers, and various chemical contaminants from industry/manufacturing plants.

If installed in areas which may be exposed to corrosive environments, special attention should be given to the equipment placement and maintenance.

- ▶ Lawn sprinklers/hoses/waste water should not spray directly on the unit cabinet for prolonged periods of time.
- ▶ In coastal areas: locate the unit on the side of the building or roof away from the waterfront.
- ▶ Fencing or shrubbery may provide some shielding protection to the unit, however minimum unit clearances must still be maintained.
- ▶ Every three months, wash the outdoor coil and any exposed cabinet surfaces.

5 AIRFLOW PERFORMANCE

Airflow performance data is based on cooling performance with a coil and no filter in place. Check the performance table (Table 3-4) for appropriate unit size selection.

External static pressure should stay within the minimum and maximum limits shown in the table below in order to ensure proper operation of both cooling, heating, and electric heating operation.

Model Number	Motor Speed *		SCFM								
			External Static Pressure-Inches W.C.[kPa]								
			0[0]	0.1[.02]	0.2[.05]	0.3[.07]	0.4[.10]	0.5[.12]	0.6[.15]	0.7[.17]	0.8[.20]
36	Tap 1 ¹	SCFM	1046	951	890	876	841	/	/	/	/
		Watts	110	120	131	135	143	/	/	/	/
		Amps	1.26	1.33	1.49	1.43	1.33	/	/	/	/
	Tap 2 ²	SCFM	1122	1075	1023	1009	976	931	/	/	/
		Watts	148	158	170	174	183	196	/	/	/
		Amps	1.52	1.6	1.68	1.71	1.77	1.87	/	/	/
	Tap 3 ³	SCFM	1327	1287	1243	1229	1199	1158	1118	/	/
		Watts	234	247	260	265	275	290	306	/	/
		Amps	2.15	2.25	2.34	2.38	2.45	2.57	2.69	/	/
	Tap 4 ⁴	SCFM	1411	1372	1330	1316	1285	1245	1206	1131	/
		Watts	275	288	302	307	316	333	349	380	/
		Amps	2.45	2.55	2.66	2.69	2.77	2.89	3.01	3.24	/
	Tap 5 ⁵	SCFM	1572	1538	1500	1487	1458	1419	1382	1353	1314
		Watts	380	396	411	416	427	444	463	476	497
		Amps	3.2	3.36	3.47	3.51	3.59	3.72	3.86	3.96	4.12
60	Tap 1 ¹	SCFM	1398	1338	1282	1231	1175	/	/	/	/
		Watts	166	176	187	198	208	/	/	/	/
		Amps	1.7	1.7	1.8	1.9	1.9	/	/	/	/
	Tap 2 ²	SCFM	1476	1420	1367	1316	1265	1213	/	/	/
		Watts	194	205	217	228	239	250	/	/	/
		Amps	1.9	2	2	2.1	2.2	2.3	/	/	/
	Tap 3 ³	SCFM	1777	1728	1680	1635	1592	1549	/	/	/
		Watts	323	338	352	365	378	391	/	/	/
		Amps	2.8	2.9	3	3.1	3.2	3.3	/	/	/
	Tap 4 ⁴	SCFM	1937	1889	1842	1792	1758	1720	1670	1636	/
		Watts	412	428	444	457	471	486	499	513	/
		Amps	3.5	3.6	3.7	3.8	3.9	4	4.1	4.2	/
	Tap 5 ⁵	SCFM	2235	2191	2144	2091	2050	2010	1971	1936	1892
		Watts	623	642	660	673	689	704	719	734	744
		Amps	4.5	5.1	5.3	5.4	5.5	5.6	5.7	5.8	5.8

Table 5-1

Bold outlined areas represent airflow outside of the required 300-450 cfm/ton range.

¹ Silent Mode --- low stage speed.

² Factory Default --- low stage speed.

³ Silent Mode --- high stage speed. Or High Static Pressure Mode --- low stage speed.

⁴ Factory Default --- high stage speed.

⁵ High Static Pressure Mode --- high stage speed.

NOTES:

- This table is only used to select the **highest blower speed**.
- The rated airflow of systems without electric heater kits requires between 300 and 450 cubic feet of air per minute (CFM). The rated airflow of systems with electric heater kits requires between 350 and 450 cubic feet of air per minute (CFM).
- The air distribution system has the greatest effect on airflow. Therefore, the contractor should use only industry-recognized procedures.
- Duct design and construction should be carefully done. System performance can be lowered dramatically through poor design or workmanship.
- Air supplier ducts should be located along the perimeter of the conditioned space and properly sized. Improper location or insufficient air flow may cause drafts or noise in the ductwork.

6. Installers should balance the air distribution system to ensure proper quiet airflow to all rooms in the home. An air velocity meter or airflow hood can be used to balance and verify branch and system airflow (CFM).

7. Factory Default maximum static pressure 0.6 inches W.C.. If static pressure exceeds 0.6 inches W.C. please dial code to Tap(5)

NOTE

For instructions on how to select fan speeds, refer to Section 6 of this manual.

6 INDOOR FAN MOTOR FUNCTION

System Operation and Function

This unit can run with either 4 Stage Fan Control or 2 Stage Fan Control.

The factory default is 4 Stage Fan Control. To change the factory default parameters, refer to the information provided below.

Four Stage Fan Control

When configured for 4 stage fan control the fan speed will automatically change according to the temperature difference between T1 (return air temperature) and Ts (estimated thermostat set point). Higher differences in temperature between T1 and Ts relate to higher fan speeds. This fan control is supported by either a single or two stage thermostat.

The ECM Constant Torque motor has 5 selectable speed taps. The unit can use up to 4 fan speeds by setting the SW6-4 dip switch to the "ON" position (default). For determining the required airflow, refer to the Airflow Performance Table (Table 5-1). To select the fan speeds, change SW6-1 and SW6-2 dip switches, refer to Table 6-1 for dip switch speed configuration.

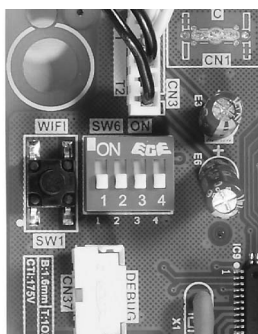


Figure 6-1

SW6-4	SW6-1	SW6-2	High	Mid-high	Mid	Low
ON*	OFF	OFF	2	2	1	1
	OFF	ON	3	2	2	1
	ON*	OFF*	4	3	2	1
	ON	ON	5	4	3	2

Table 6-1

*Note: Default Fan Speed is SW6-4 ON, SW6-1 ON, SW6-2 OFF

Two Stage Fan Control

The unit supports two stage fan control which requires a two stage thermostat (Y1&Y2). When there is a call for Y2, the blower motor will turn to high speed setting. When there is a call for Y1, the blower motor will turn to low speed setting. Unit will run at low speed setting when there is only G call. It will run in high speed setting when there is W/W1/W2 signal (when the electric heat kit is on).

Customers can select two stage fan control by setting the SW6-4 dip switch to the "OFF" position. Select the two fan speeds using the SW6-1 and SW6-2 dip switches, refer to Table 8. Refer to Airflow Performance Table (Table 7) for reference airflow.

If 2 stage thermostat is not available, single stage thermostat may be used, please refer to Wiring Diagram section for wiring instructions. If Y1 and Y2 are jumped, the unit will only run in high stage fan speed.

SW6-4	SW6-1	SW6-2	High	Mid-high	Mid	Low
OFF	OFF	OFF	2	/	1	/
	OFF	ON	3	/	1	/
	ON	OFF	4	/	2	/
	ON	ON	5	/	3	/

Table 6-2

System Operation and Function

The Anti-Cold Air Fan Delay function utilizes a sensor (T2) located on the indoor coil, which prevents the blower from turning on until the coil has reached a certain temperature. This feature prevents cold air blow during heating operation and is activated by setting SW6-3 dip switch to the "ON" position (default), refer to Figure 6-1 and Table 6-3.

1. When SW6-3 dip switch is set to the "ON" position and the unit is in heating mode, the Anti-Cold Air Fan Delay function will activate based on the following entry conditions (all 3 conditions must be met):

- Indoor Coil Temperature (T2) < 82.4 °F
- Electric heat kit is turned off
- There is a call for Y1 from thermostat to indoor unit

2. This function will deactivate if ONE OF the following exit conditions are met OR the system has been operating in heating mode for 15 minutes.

- T2 ≥ 89.6 °F
- Heater kit is turned on
- The system is NOT running Heat mode

3. During the heating mode, if one of the exit conditions of Anti-Cold Air is satisfied, the blower motor will turn on in first stage fan speed.

4. During the heating mode, if all of the entry conditions of Anti-Cold Air are met and maintained for 120s, the blower motor will change to first stage speed.

SW6-3	
ON*	Heat: Anti-Cold Air Fan Delay via Temp Sensor
OFF	Heat: Timed Fan Delay

Table 6-3

*Note: Default is ON

Heating Fan Delay

If SW6-3 dip switch is set to the "OFF" position (refer to Table 6-2), and the unit is in heating mode, the blower will operate with a 90 second delay with the fan speed dictated by Y1 or Y2 signal.

Passive Dehumidification (Optional)

The unit has a Passive Dehumidification function which lowers the fan speed and optimizes the compressor operation with a DH call from the thermostat. This function requires proper DH wiring from the indoor unit to the thermostat (with a humidistat).

NOTE

If DH wire is not connected, the unit will still function normally, but will not be able to run in dehumidification mode.

7 DUCTWORK

Field ductwork must comply with the National Fire Protection Association NFPA 90A, NFPA 90B and any applicable local ordinance(s).

⚠ WARNING

FIRE HAZARD AND CARBON MONOXIDE

Do not, under any circumstances, connect return ductwork to any other heat producing device such as fireplace insert, stove, etc. Unauthorized use of such devices may result in fire, carbon monoxide poisoning, explosion, personal injury or property.

Sheet metal ductwork run in unconditioned spaces must be insulated and covered with a vapor barrier. Fibrous ductwork may be used if constructed and installed in accordance with SMACNA Construction Standard on Fibrous Glass Ducts. Ductwork must comply with National Fire Protection Association as tested by U/L Standard 181 for Class I Air Ducts. Check local codes for requirements on ductwork and insulation.

- ▶ Duct system must be designed within the range of external static pressure the unit is designed to operate against. It is important that the system airflow be adequate. Make sure supply and return ductwork, grills, special filters, accessories, etc. are accounted for in total resistance. See airflow performance tables in Section 5 of this manual.
- ▶ Design the duct system in accordance with "ACCA" Manual "D" Design for Residential Winter and Summer Air Conditioning and Equipment Selection. Latest editions are available from: "ACCA" Air Conditioning Contractors of America, 1513 16th Street, N.W., Washington, D.C. 20036. If duct system incorporates flexible air duct, be sure pressure drop information (straight length plus all turns) shown in "ACCA" Manual "D" is accounted for in system.

💡 NOTE

If an elbow is included in the plenum close to the unit, it must not be smaller than the dimensions of the supply duct flange on the unit.

NOTICE

The front flange on the return duct (if connected to the blower casing) must not be screwed into the area where the power wiring is located. Drills or sharp screw points can damage insulation on wires located inside unit.

- ▶ The unit is provided with flanges on the supply and return air openings. All ductwork should be secured to the flanges using proper fasteners for the type of duct used and tape the duct-to unit joint as required to prevent air leaks.

NOTICE

When fastening ductwork to the side duct flanges on the unit, insert the screws through the duct flanges only. **DO NOT** insert the screws through the casing. Outdoor ductwork must be insulated and waterproofed.

💡 NOTE

Be sure to note supply and return openings. Refer to Figure 3-1 for information concerning supply and return air duct dimensions.

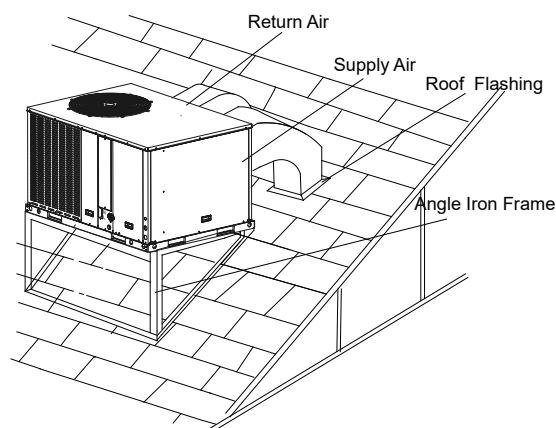


Figure 7-1 Rooftop Installation - Frame Mounting

8 CONDENSATE DRAIN CONNECTION

Unit should be installed in accordance with national and local safety codes, including but not limited to ANSI/NFPA No. 70, local plumbing and wastewater codes and any other applicable codes.

8.1 Install Drain Pipe

1. Ensure drain lines do not block access to front of the unit. Minimum clearance of 24 inches is required for filter, coil or blower removal and service access.
2. Make sure unit is leveled or pitched slightly towards primary drain connection so that water will drain completely from the pan.
3. Do not reduce drain line size to less than connection size provided on condensate drain pan.
4. All drain lines must be pitched downward away from the unit at a minimum of 1/8" per foot of line to ensure proper drainage.
5. Do not connect condensate drain line to a closed or open sewer pipe. Run condensate to an open drain or run line to a safe outdoor area.
6. The drain line should be insulated where necessary to prevent sweating and damage due to condensate forming on the outside surface of the line.
7. Make provisions for disconnecting and cleaning of the primary drain line should it become necessary. Install a 2 inch trap in the primary drain line as close to the unit as possible. Make sure that the outlet of the trap is at least 1 inch lower than the drain pan condensate connection to allow proper drainage of the pan.

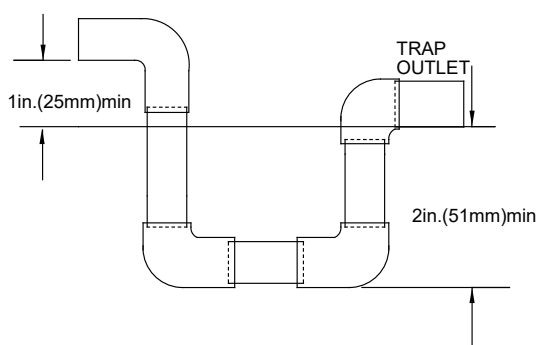


Figure 8-1

NOTE

When making drain fitting connections to the drain pan, use a thin layer of Teflon paste, silicone or Teflon tape and install by hand tightening.

NOTE

When making drain fitting connections to drain pan, do not overtighten. Over-tightening fittings can split pipe connections on the drain pan.

9 AIR FILTER (Not Factory-Installed)

Filters and filter racks are not included with the unit and must be field supplied.

An external filter or other means of filtration must be properly sized for a maximum of 300 feet/min. air velocity or what is recommended for the type of filter installed.

Filter application and placement are critical to airflow, which may affect the heating and cooling system performance. Reduced airflow can shorten the life of the system's major components, such as motor, elements, heat relays, evaporator coil or compressor. Consequently, we recommend that the return air duct system have only one filter location. For systems without a return air filter grill, multiple filter grills can be installed at each of the return air openings.

If adding high efficiency filters or electronic air filtration systems, it is very important that the air flow is not reduced. If air flow is reduced the overall performance and efficiency of the unit will be reduced. It is strongly recommended that a professional installation technician is contacted to ensure such filtration systems are installed correctly.

NOTE

Do not double filter the return air duct system. Do not filter the supply air duct system. This will change the performance of the unit and reduce airflow.

WARNING

FIRE HAZARD

Do not operate the system without filters. A portion of the dust suspended in the air may temporarily lodge in the duct runs and at the supply registers. Any circulated dust particles could be heated and charred by contact with the air handler elements. This residue could soil ceilings, walls, drapes, carpets and other articles in the house. Soot damage may occur with filters in place, when certain types of candles, oil lamps or standing pilots are burned.

Heat Pump Model	No.	Size Recommended
3 Ton Model	1	20"x20"x1"
5 Ton Model	1	24"x36"x1"

Table 9-1

10 ELECTRICAL WIRING

Field wiring must comply with the National Electric Code (NEC) and any applicable local ordinance.

⚠ WARNING

ELECTRICAL SHOCK

Disconnect all power to unit before installing or servicing. More than one disconnect switch may be required to de-energize the equipment. Hazardous voltage can cause severe personal injury or death.

10.1 Power Wiring

1. It is important that proper electrical power is available for connection to the unit being installed. See the unit nameplate, wiring diagram, and electrical data in the installation instructions for more detailed requirements. Voltage tolerance should not be over 10% from rating voltage.
2. If any of the wiring must be replaced, replacement wiring must be the same type as shown in nameplate, wiring diagram and electrical data sheet.
3. Install a branch circuit disconnect of adequate size to handle starting current, located within sight, and readily accessible to the unit.
4. Electric Heater: If the optional Electric Heat Kit is installed, the unit should be equipped with suitable circuit breakers or fuse. Refer to Table 9-1 and 10-1 for more information. These breaker(s) protect the internal wiring in the event of a short circuit and serve as a disconnect. Circuit breakers installed within the unit do not provide over-current protection of the supply wiring and therefore may be sized larger than the branch circuit protection.
 - ▶ Supply circuit power wiring must be 221 °F minimum copper conductors only. Refer to Table 10-1 and 10-2 for ampacity, wire size and circuit protector requirements. Supply circuit protective devices may be either fuses or "HACR" type circuit breakers. 1-3/8" knockouts inside the cabinet are provided for connection of power wiring to electric heater.
 - ▶ Power wiring is connected to the power terminal block in unit electric cabinet. See Electric Heater Kit Installation Instructions for details.
5. See wiring diagram located on inside of control board access panel for proper wiring instructions.

10.2 Grounding

⚠ WARNING

ELECTRICAL SHOCK

The unit must be permanently grounded. Failure to do so can result in electrical shock causing personal injury or death.

- ▶ The unit must be electrically grounded in accordance with local codes and the National Electric Code (NEC).
- ▶ Grounding may be accomplished by attaching ground wire(s) to ground lug(s) provided in the unit wiring compartment.

10.3 Control Wiring

⚠ WARNING

FIRE HAZARD

Low voltage control wiring should not be run in conduit with high voltage wiring. Keep distance between the two conduits per local codes.

- ▶ 18 AWG. color-coded low voltage wire should be used for lengths less than 50 ft. For wire lengths longer than 50 ft., 16 AWG. wire should be used.
- ▶ 7/8" knockout hole should be used to route control wires into the unit.
- ▶ After installation, ensure separation of low voltage and high voltage wiring is maintained.

Refer to Figure 10-2 for thermostat wiring diagrams.



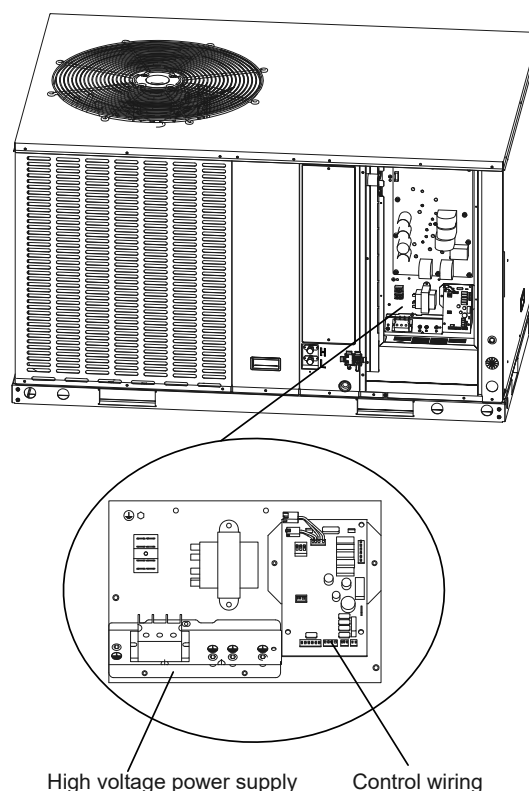


Figure 10-1


Support 3H and 2C thermostat

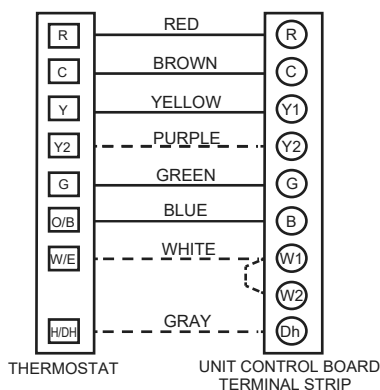


Support 4H and 2C thermostat

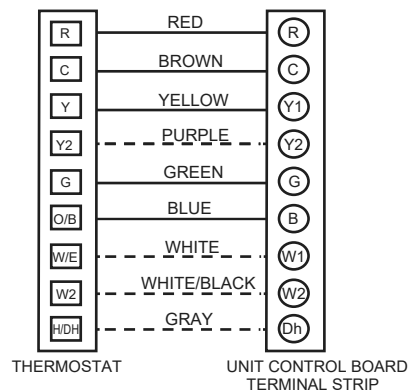


Support 3H and 1C thermostat

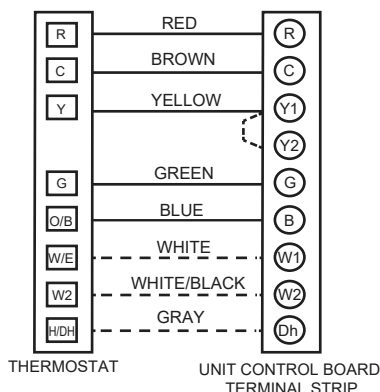

Support 2H and 2C thermostat

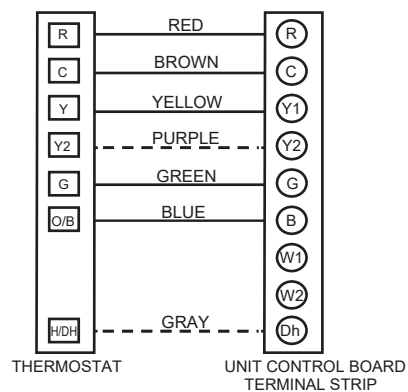

Support 1H and 1C thermostat

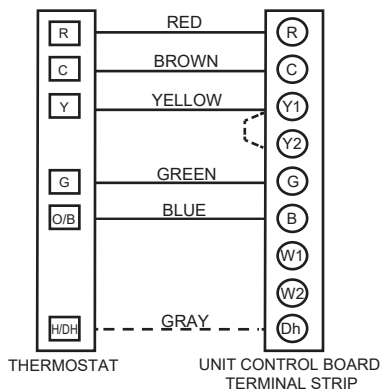

Support 2H and 1C thermostat

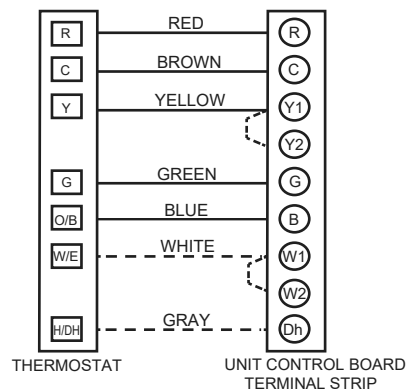


Figure 10-2 Thermostat Wiring Diagrams

NOTE

Dh wiring is optional and requires a thermostat with a humidistat. Dh functions as Passive Dehumidification and will downstage the indoor fan speed. System will operate according to normal sequence of operations if Dh wiring is absent.

NOTE

Dashed lines in the above thermostat wiring diagrams refer to optional wiring (wiring for Passive Dehumidification Function and/OR Electric Heat, and 2 stage fan control). For thermostat wiring please refer to the Owner's Manual of the thermostat.

NOTE

Y2 wiring is optional for 4 speed fan control. For 2 stage fan control Y2 wiring is required.

NOTE

B wire must be used with heat pump system only, the reversing valve energizes in heating.

⚠ WARNING

ELECTRICAL SHOCK

Label all wiring prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

Size (Tons)	Volt	Compressors		OD Fan Motors	Supply Blower Motor	Unit Circuit	
		RLA	LRA	FLA	FLA	MCA ¹ (Amps)	Max Fuse ² Breaker ³ Size(Amps)*
36 (3.0)	208/230-1-60	15.0	52.0	2.0	4.3	25.1	40
60 (5.0)	208/230-1-60	27.0	61.0	2.0	5.9	41.7	60

Table 10-1 Electrical Data Without Electric Heat

Size (Tons)	Heater Circuit without units					
	Model	kW	Stages	Amps	MCA ¹ (Amps)	Max Fuse ² Breaker ³ Size(Amps)
36 (3.0)	EHK-05J-15	3.8/5	1	18.1/20.8	23/26	25/30
	EHK-08J-15	5.6/7.5	1	27.1/31.3	34/40	35/40
	EHK-10J-15	7.5/10	1	36.1/41.7	46/53	50/60
	EHK-15J-15	11.3/15	2	54.2/62.5	68/79	70/80
60 (5.0)	EHK-05J-15	3.8/5	1	18.1/20.8	23/26	25/30
	EHK-08J-15	5.6/7.5	1	27.1/31.3	34/40	35/40
	EHK-10J-15	7.5/10	1	36.1/41.7	46/53	50/60
	EHK-15J-15	11.3/15	2	54.2/62.5	68/79	70/80
	EHK-20J-15	15/20	2	72.2/83.3	91/105	100/110

Table 10-2 Electrical Data With Electric Heat

¹. Minimum Circuit Ampacity.

². Maximum Over Current Protection per Standard UL 1995.

³. Fuse or HACR circuit breaker size field installed.

* Max Fuse/Breaker Sizes are for electric heater ONLY (dual point electric heat). DOES NOT include breaker size for the unit.

💡 NOTE

Refer to Electric Heat Kit Installation Manual, some heater kits include fuses from the manufacturer.

⚠ WARNING

ELECTRICAL SHOCK / FIRE HAZARD

Any power supply and circuits must be wired and protected in accordance with federal, state and local electrical codes.

11 START UP

11.1 System Start Up

1. Ensure Sections 4, 5, 6, 7, and 8 have been completed.
2. Set System Thermostat to OFF.



Figure 11-1

3. Turn on disconnect to apply power to the indoor and outdoor units.

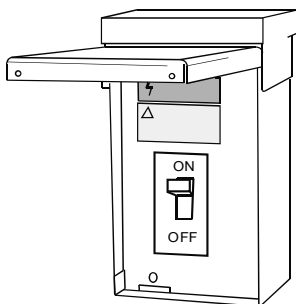


Figure 11-2

4. Wait one (1) hour before starting the unit if compressor crankcase heater is used and the outdoor ambient temperature is below 70 °F.



Figure 11-3

5. Set system thermostat to ON.



Figure 11-4

12 SYSTEM CHARGE ADJUSTMENT

NOTE

Units come precharged from the factory, 3 Ton units with 4-6 lb-oz and 5 Ton units with 6-10 lb-oz. Follow Section 12 for charge adjustments i.e if components have been replaced, or if there is a suspected leak.

12.1 Charging: Weigh-In Method

Weigh-in method is recommended anytime a system charge is being replaced. Weigh-in method can also be used when power is not available to the equipment site or operating conditions (indoor/outdoor temperatures) are not in range to verify with the subcooling charging method.

Heat Pump Model	Refrigerant charge (lb-oz)
3 Ton Model	4-6
5 Ton Model	6-10

Table 12-1

12.2 Subcooling Charging and Refrigerant Adjustment In Cooling (Above 55°F Outdoor Temp.)

1. Check the outdoor ambient temperatures.
Subcooling (**in cooling mode**) is the only recommended method of charging above 55°F outdoor ambient temperatures. For outdoor ambient temperatures below 55°F, use weigh-in charge method.

NOTE

It is important to return in the spring or summer to accurately charge the system in the cooling mode when outdoor ambient temperature is above 55°F.

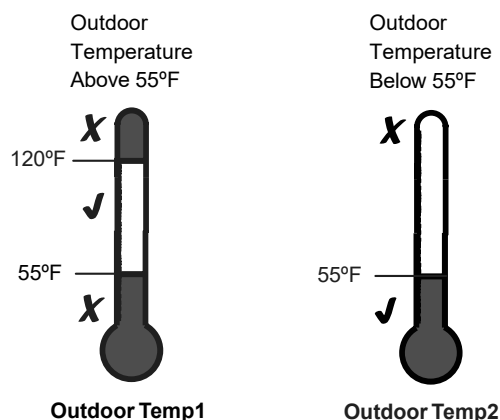


Figure 12-1

For best results the indoor temperature should be kept between 70°F to 80°F.

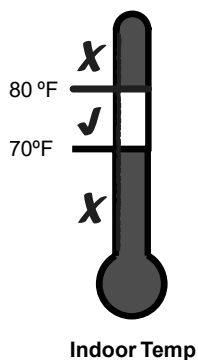


Figure 12-2

2. Stabilize the system.
3. After **starting the system in cooling mode**, short press "FORCE" button, and a "└" symbol should appear. System may take 10 minutes to ramp up. Operate the system for a minimum of twenty (20) minutes.

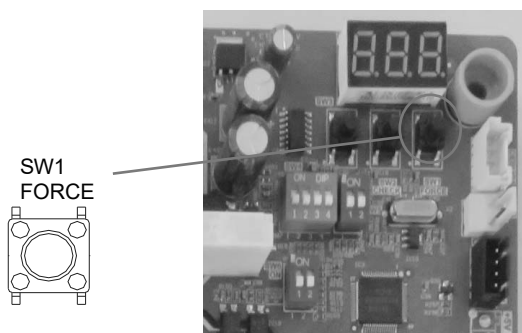


Figure 12-3

NOTE

After a twenty (20) minute stabilization period operating at 60 Hertz, maintain continuous operation while adjusting refrigerant charge. After adjusting, operate system for a minimum of five (5) minutes for system to stabilize, otherwise repeat step 3.



Figure 12-4

4. Calculate subcooling value on liquid line (According to Table 12-2)
 - ▶ Measured Liquid Line Temp. = _____ °F
 - ▶ Measured Liquid Line Pressure = _____ PSIG
 - ▶ Calculate subcooling value = _____ °F

NOTE

Ensure the temperature sampling position as shown above.

NOTE

If calculated subcooling value is lower than the design subcooling value (Table 12-3), please add refrigerant. Repeat steps 2 through 4.

Suction Temp (°F)	Final Superheat (°F)							
	6	7	8	9	10	11	12	13
55	173	176	179	182	185	188	191	195
60	188	191	195	198	201	204	208	211
65	204	208	211	215	218	221	225	229
70	221	225	229	232	236	239	243	247
75	239	243	247	251	255	259	262	266
80	259	262	266	270	275	279	283	287
85	279	283	287	291	295	300	304	309
90	300	304	309	313	318	322	327	331
95	322	327	331	336	341	346	351	355
100	346	351	355	360	365	370	376	381
105	370	376	381	386	391	397	402	407
110	397	402	407	413	418	424	430	435
115	424	430	435	441	447	453	459	465
120	453	459	465	471	477	483	489	496
125	483	489	469	502	508	515	521	528

Table 12-2 R-410A Refrigerant Chart - Final Subcooling

Heat Pump Model	Design Subcooling
3 Ton and 5 Ton Model	6°F ± 2°F

Table 12-3

5. Adjust refrigerant level to attain proper gauge pressure.

NOTE

Add refrigerant if the subcooling reading from Table 12-2 is lower than the designed value (Table 12-3).

- ▶ Connect gauges to refrigerant bottle and unit as illustrated (Figure 12-4 and 12-5).
- ▶ Purge all hoses.
- ▶ Open tank.
- ▶ Stop adding refrigerant when subcooling matches the charging chart (Table 12-2) Final Subcooling value.

NOTE

Recover refrigerant if the subcooling reading from Table 12-2 is higher than the designed value (Table 12-3).

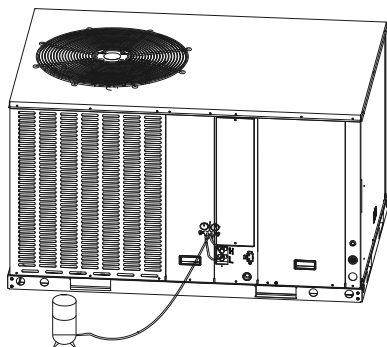


Figure 12-5

6. Stabilize the system.

- ▶ Wait 5 minutes for the system condition to stabilize between adjustments.

NOTE

When the subcooling matches the chart, the system is properly charged.

- ▶ Remove gauges.
- ▶ Replace service port caps to prevent leaks. Tighten finger tight plus an additional 1/6 turn.

7. Record System Information for reference (Table 12-3).
Record system pressures and temperatures after charging is complete.

NOTE

The subcooling also can be calculated by pressing check button after getting T3 and T3L temperatures (refer to table 13-4).

Description	Value
Outdoor model number	
Measured Outdoor Ambient	°F
Measured Indoor Ambient	°F
Check Condenser Outlet Temp.(T3L)	°F
Check Condenser Temp.(T3)	°F
Calculate subcooling value =T3 -T3L	°F

Table 12-4

13 SYSTEM OPERATION AND TROUBLESHOOTING

13.1 Control Logic Description

- ▶ The variable speed system adopts the same 24VAC control as any conventional heat pump.
- ▶ The compressor's speed is controlled based on coil pressures monitored by the unit's pressure transducer. To ensure stable and adequate capacity, the compressor speed will modulate relative to evaporator pressure during cooling operation and relative to condensing pressure during heating operation. The target pressure can automatically adjust based on compressor operation so optimal capacity can be achieved. Target pressure can be manually adjusted (SW4) to achieve improved dehumidification and capacity demands.

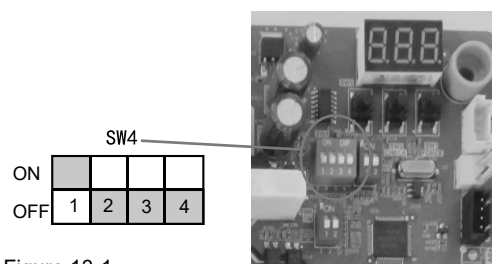


Figure 13-1

SW4-1	ON*	Must be set at "ON" position
	OFF	Unused
SW4-2	ON	Unused
	OFF*	MuMust be set to "OFF" position
SW4-3	ON	Adaptive capacity output disabled
	OFF*	Adaptive capacity output enabled
SW4-4	ON	Accelerated cooling/heating
	OFF*	Normally cooling/heating

Table 13-1

*Factory Default

- ▶ Adaptive capacity function is a "self-learning function" which allows a range of target coil temperatures to adapt for better unit operation and reduced short cycling.
- ▶ Accelerated cooling/heating function changes the initial target coil temperature to provide "enhanced comfort" by increasing unit capacity.

13.2 Sensors (Thermistors/Pressure Transducer)

- ▶ T1 = Return Air Temperature
 - Indoor Fan Control
- ▶ T2 = Indoor Coil Temperature
 - Anti-cold air function in heating mode
- ▶ T3 = Outdoor Coil Temperature
 - High/Low temperature protection
 - Outdoor fan control (cooling mode)
 - Defrost control (heating mode)
- ▶ T4 = Ambient Temperature
 - Operating condition permission
 - Defrosting condition permission
 - Outdoor fan control (heating mode)
- ▶ T5 = Compressor Discharge Temperature
 - High/Low temperature protection
 - Electronic Expansion Valve (EEV) (ODU/heating mode only)
- ▶ Th = Compressor Return Temperature
- ▶ T3L = Liquid Line Temperature
- ▶ TF = Control Board Module Temperature
 - Inverter High Temperature Protection
- ▶ Pressure transducer
 - Compressor frequency control
 - Electronic Expansion Valve (EEV) control (in both heating and cooling modes)
 - High pressure protection (heating mode)
 - Low pressure protection (cooling mode)

13.3 Defrost Description

- ▶ The Demand Defrost Control (DDC) monitors the ODU coil temperature using thermistor (T3). A second thermistor (T4) monitors outdoor ambient temperature. Based on these parameters, as well as accumulative run time and high pressure, the DDC calculates proper initiation of defrost.
- ▶ Any one of the below three conditions is required to enter defrost:
 1. The calculated temperature difference between the outdoor temperature (T4) and the coil temperature (T3) is called Delta T. After Delta T is achieved and continues for 3 minutes.
 - $T4 \geq 39^{\circ}\text{F}$, $\Delta T = 18^{\circ}\text{F}$
 - $T4 \geq 30^{\circ}\text{F}$, $\Delta T = 16^{\circ}\text{F}$
 - $T4 \geq 19^{\circ}\text{F}$, $\Delta T = 14^{\circ}\text{F}$
 - When $T4 < 19^{\circ}\text{F}$, $T3 < 9^{\circ}\text{F}$, accumulative compressor run time ≥ 80 minutes.
 2. After "Minimum Run Time" (MRT) is achieved. MRT is based on outdoor ambient temperature (T4), for example:
 - MRT is 4 hours when: $T4 < 23^{\circ}\text{F}$
 - MRT is 2 hours when: $23^{\circ}\text{F} \leq T4 < 42^{\circ}\text{F}$
 3. After the high pressure saturation temperature drops below 82°F for 20 minutes.

- ▶ Defrost will terminate once outdoor coil temperature (T3) reaches 64°F for a period of 1 minute or defrost time has exceeded 8 minutes.
- ▶ Defrost Termination Settings (SW5) offers different defrost termination options for enhanced defrost for different geographical and outdoor conditions.

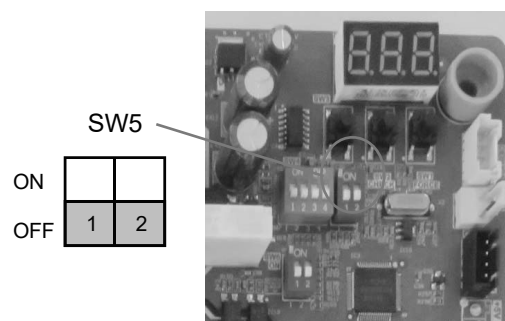


Figure 13-2

Defrosting Choice	SW5-1	SW5-2	Remarks
ON	Operating time is reduced by 10%	Defrosting extended for 60 seconds	
OFF	Normal	Normal	Default
Remarks	Enter defrost	Quit defrost	

Table 13-2

- ▶ Manual Defrost:
 1. System must have a call for heat and have been operating for a minimum of 8 minutes.
 2. Press "Force" button on inverter board for 6 seconds to begin forced defrost.
 3. Wait approximately 40 seconds for defrost to initiate.
 4. Once defrost initiates, the display will indicate "dF".
 5. Defrost test will terminate automatically, after which the display will indicate running speed.
 6. If a second defrost test is required, repeat steps 2-5 after 5 minutes.

13.4 Compressor Crankcase Heater Description

Refrigerant migration during the OFF cycle can result in noisy start-ups, therefore a CrankCase Heater (CCH) is used to minimize refrigerant migration thereby minimizing start-up noise and/or bearing "wash out". All CCHs must be installed on the lower half of the compressor shell. Its purpose is to warm the compressor during the OFF cycle, driving refrigerant from compressor. After extended shutdown periods in cold weather, it is recommended to allow CCH to be energized for at least 12 hours prior to compressor operation by applying line voltage to heat pump with thermostat OFF.

- ▶ CCH operation energizes:
 1. First time line voltage is applied and compressor discharge temperature $T5 < 54^{\circ}\text{F}$.
 2. Compressor stops running for 3 hours (outdoor ambient temperature $T4 < 41^{\circ}\text{F}$ OR compressor discharge temperature $T5 < 53.6^{\circ}\text{F}$).
 3. In process of defrosting

- CCH operation de-energizes:
 1. Compressor discharge temperature $T5 \geq 61^{\circ}\text{F}$.
 2. Compressor starts running.

13.5 Reversing Valve Operation

- Reversing valve energizes during heat mode and de-energizes in cool mode.

NOTE

During a heat call on first time operation the unit will run about 1 minute in cooling to build up pressure for reversing valve to change.

13.6 Protection Functions

- Outdoor coil temperature protection (T3)
 - i. If $T3 > 142^{\circ}\text{F}$, compressor is de-energized.
 - ii. If $T3 < 129^{\circ}\text{F}$, compressor is energized.
- Ambient temperature protection (T4)
 - i. If $40^{\circ}\text{F} \leq T4 < 125^{\circ}\text{F}$, unit can operate in cooling.
 - ii. If $5^{\circ}\text{F} \leq T4 < 86^{\circ}\text{F}$, unit can operate in heating.
 - iii. If $T4 < 6.8^{\circ}\text{F}$, heat pump will provide 24V control to indoor unit energizing electric heat (if installed).

NOTE

See Product Specification for extended performance data.

- Discharge Temperature (DT) protection (T5)
 - i. If $DT > 230^{\circ}\text{F}$ during cooling mode, the compressor will stop.
 - ii. If $DT < 185^{\circ}\text{F}$ during cooling mode, the compressor will restart.
 - iii. If $DT > 230^{\circ}\text{F}$ during heating mode, the compressor will stop.
 - iv. If $DT < 185^{\circ}\text{F}$ during heating mode, the compressor will restart.
- High Pressure (HP) protection (mechanical open/close pressure switch)
 - i. High Pressure Switch opens at $P > 580$ PSIG, the compressor and outdoor fan stop.
 - ii. High Pressure Switch closes at $P < 435$ PSIG, the compressor and outdoor fan restart.
- Low Pressure (LP) protection
 - i. If Low Pressure < 43.5 PSI for 5 minutes during cooling mode, the compressor and outdoor fan will stop. The system will attempt to run again after 3 minutes.
 - ii. If condensing temp. $T_c < \text{outdoor ambient temp. } T4$ during heating mode, the compressor and outdoor fan will stop.
- Module (inverter) protection (TF)
 - i. If $TF > 165^{\circ}\text{F}$, the compressor and outdoor fan will stop.
 - ii. If $TF < 140^{\circ}\text{F}$, the compressor and outdoor fan will restart.

13.7 Fault Code Table

Outdoor Control Board Code	Fault Description (Sensor)
AtL	Ambient Temperature Limited T4 (heat pump)
C3	The coil sensor is seated fault in cooling(T3)
E1	Communication error
E4	Temperature sensor fault(T3,T4,T5,Th,T3L,TF)
E5	High/Low voltage protection
E6	DC fan motor fault
E7	Compressor discharge sensor is seated fault (T5)
E9	EEPROM fault
F1	High pressure switch(HPS) fault
H0	Communication fault in main control chip
H5*	5 times (P2) protection in 100 minutes, lockup
H8	Pressure transducer fault (PT)
L0-L9	The IPM module protection(only for analysis)
P0	High module temperature protection (TF)
P1	High pressure protection (HPS)
P2	Low pressure protection in cooling or heating (PT)
P3	Compressor over current protection
P4	High T5 protection
P5	Condensor coil temperature protection in cooling (T3)
P6	IPM module protection
P8	DC fan motor hurricane/typhoon protection
PC	Evaporator freezing protection
PH	Low discharge superheat protection

System Protection Status Codes**

└	Forced operation mode
L	Running indication under T3 limited condition
D	Running indication under T5 limited condition
P	Running indication under compressor ratio limited condition
F	Running indication under TF limited condition
C	Running indication under current limited condition
U	Running indication under low voltage limited condition
A	Running indication under return oil model
dF	Running indication under defrost model

Table 13-3

* Fault requires hard restart

** If the first digit shown on the control board LED is one of the following protection codes (followed by two numerical digits which show the current compressor frequency in Hz), the unit will continue to run but in a limited condition. The only exception is when the system is in defrost mode, which only displays "dF" (without any numerical digits following).

Indoor Unit Board LED Codes

Number of flashes	Description
Always ON	Normal
1	Dehumidification mode active
2	Reserved
3	Anti-cold air function active
4	Temperature sensor fault (T1)
5	Temperature sensor fault (T2)
6	Communication error

Table 13-4

13.8 Parameter Point Check Table

- To display system parameters, press the "Check" button to index through the series of parameters available. The first time you press the "Check" button, it will display the sequence, and after 1 second it will display the value of the parameter. If you press the "Check" button again, it will display the next sequence. Refer to Figure 32 for check button location on the control board.

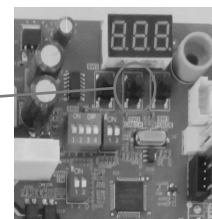


Figure 13-3

- Normal Status, last two digits will display under the following conditions
 - i. Unit not operating (Standby Mode); "outdoor ambient temperature".
 - ii. Unit operating; displays "compressor operating frequency".
- After 20 seconds on same parameter, the display will revert back to normal status.
- If a system protection is active, first digit will display "status code".

No.	Point check content	Example	Remark
0	Outdoor unit capacity	RH5	RH5=Heat pump 5 ton
1	Outdoor unit mode	2	0 Standby, 2 cooling, 3 Heating
2	Outdoor unit set compressor speed(Hz)	66	66 Hz
3	T3(outdoor coil temp.) °F	108	108 °F
4	T4 (outdoor ambient temp.) (°F)	95	95 °F
5	T5 (compressor discharge temp.) (°F)	140	140 °F
6	T6 (compressor suction temp.) (°F)	55	55 °F
7	T7(liquid line temp.) °F	99	99 °F
8	Tf (module temp.) (°F)	120	120 °F
9	Pe (evaporating pressure) (PSI)	140	140 psi
10	Pc (condensing pressure) (PSI)	380	380 psi
11	Tes target of the evaporating temp. (only use for cooling mode) (°F)	43	43 °F
12	Te (evaporating temp.) (°F)	43	43 °F
13	Tcs target of the condensing temp. (only use for heating mode) (°F)	106	106 °F
14	Tc (condensing temp.) (°F)	106	106 °F
15	Target of the compressor discharge superheat (only use for heating mode) (°F)	36	36 °F
16	Compressor discharge superheat (°F)	36	36 °F
17	Opening of EEV	200	200 p(0~480)
18	Fan speed	9	9 speed
19	Compressor current (A)	10	10 A
20	Alternating voltage	230	230 V
21	Compressor input dc voltage	380	380 V
22	Continuous running time of the compressor	35	35 min
23	Last Fault Code	00	see table 6-2 4 (*UPDATE*)
24	Software version	01	V1.0
25	T1 (Return air temp) (°F)	70	70°F
26	T2 (Indoor coil temp) (°F)	50	50°F
27	Indoor blower motor speed	4	4 speed
28	Ts (Estimated thermostat set point) (°F)	70	70°F
29	Remark"--"	--	--

Table 13-5

13.9 Control Board Overview

13.9.1 Outdoor Unit Control Board for 3 Ton Model

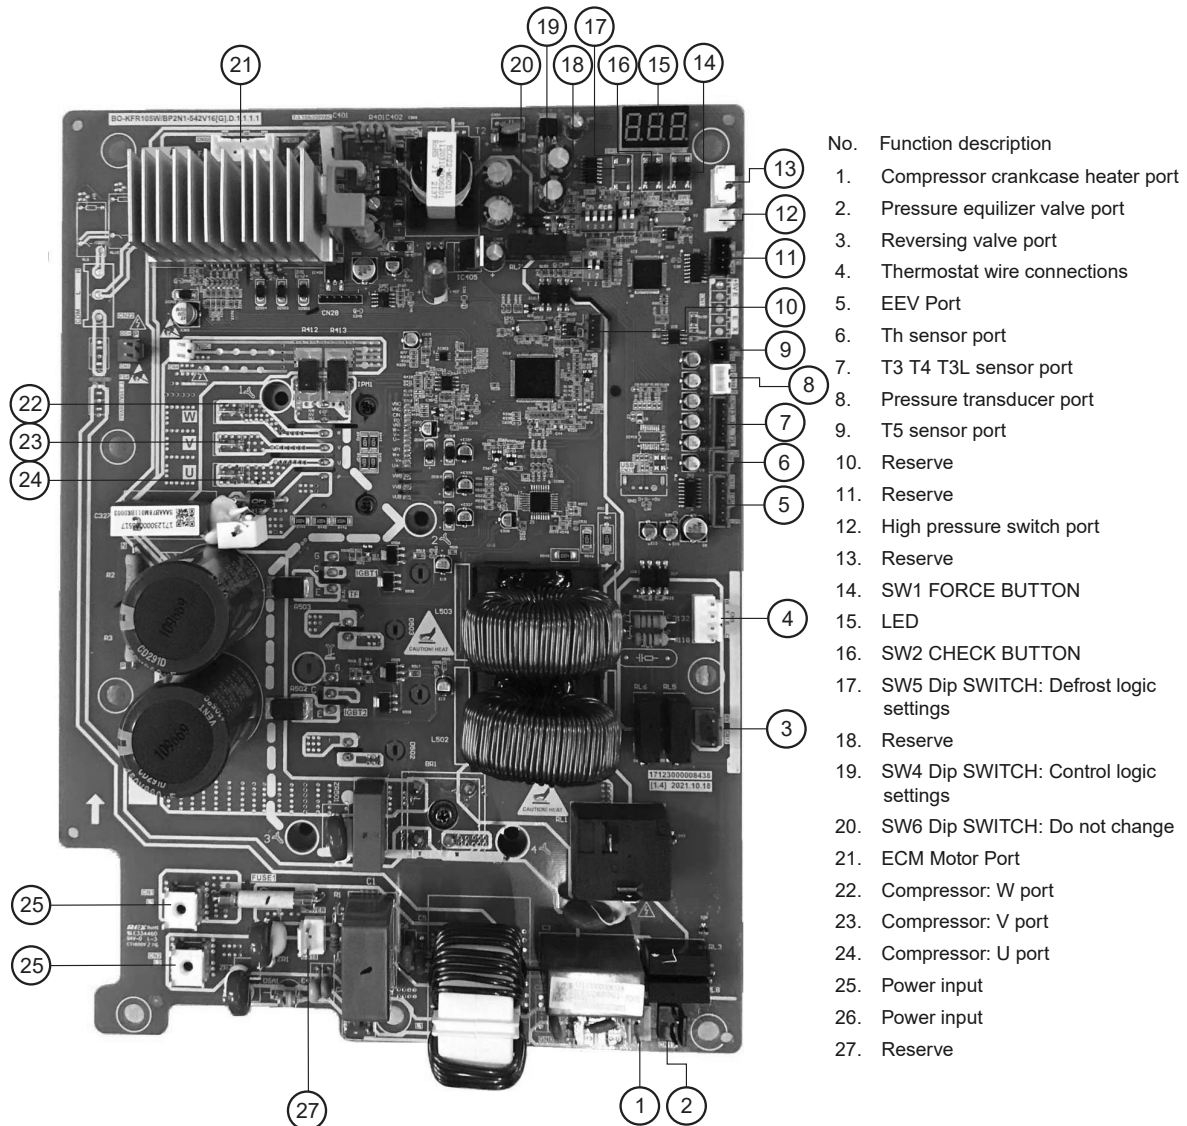


Figure 13-4

13.9.2 Outdoor Unit Control Board for 5 Ton Model


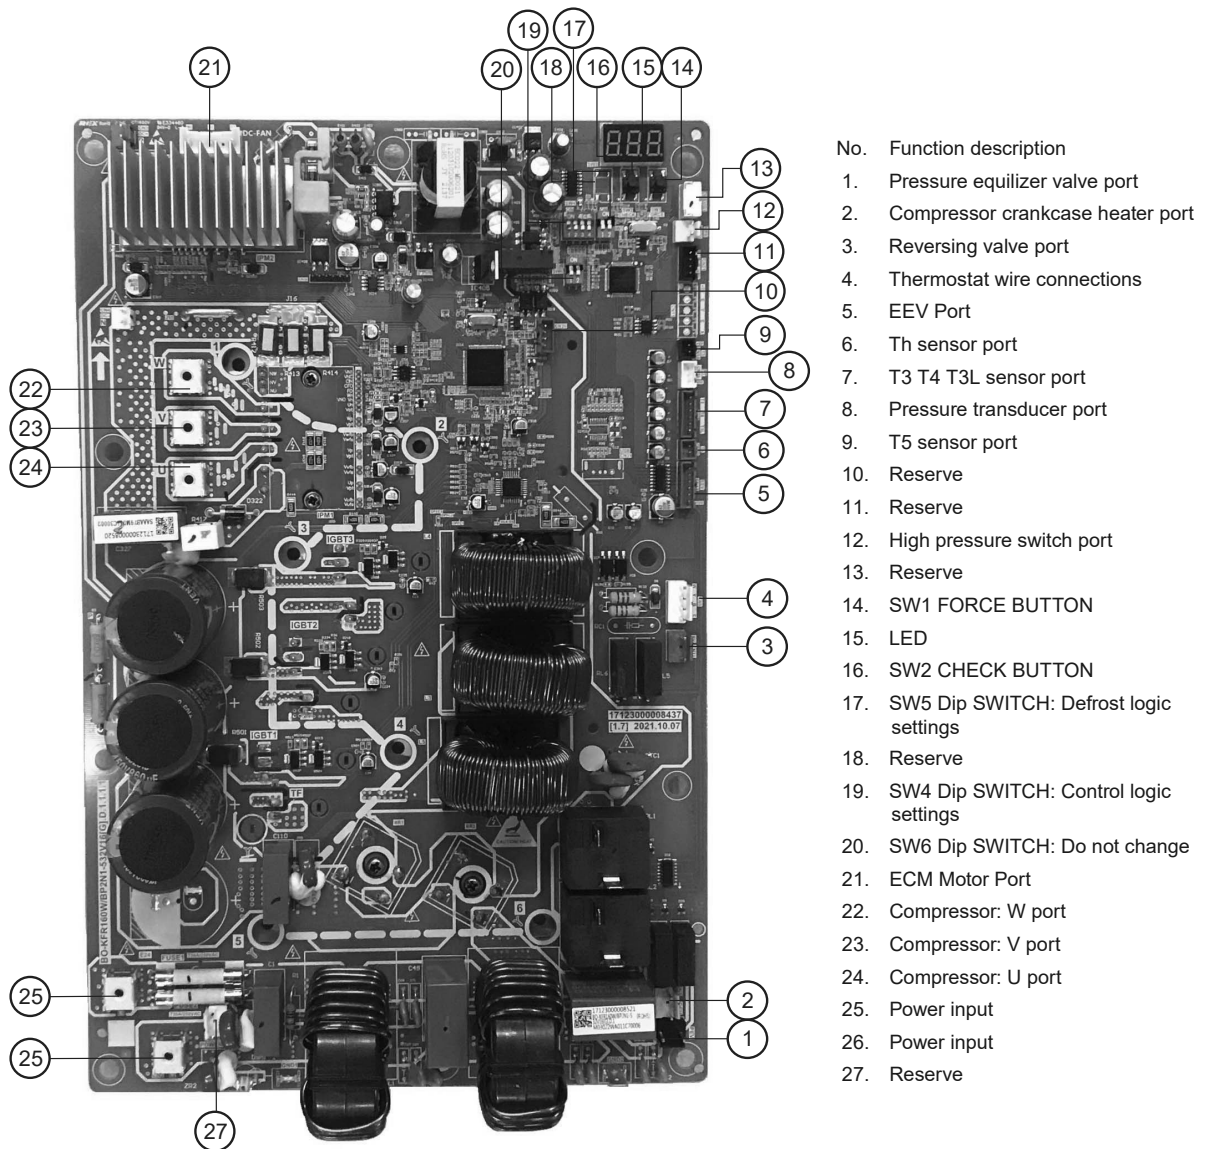


Figure 13-5

13.9.3 Indoor Unit Control Board

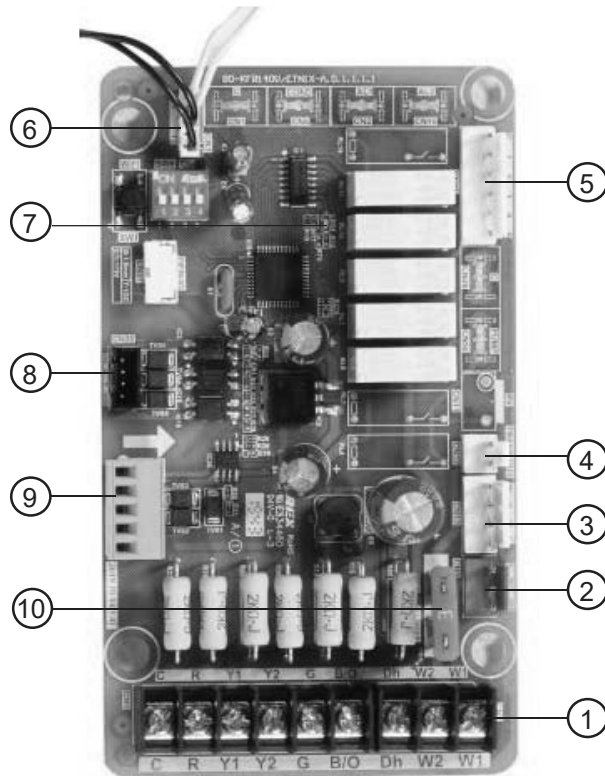

- | No. | Function description |
|-----|-------------------------------------|
| 1. | Thermostat wire connection terminal |
| 2. | Electric Heat Kit E port |
| 3. | Thermostat wire port (to ODU board) |
| 4. | Transformer port |
| 5. | Blower motor port |
| 6. | T1, T2 sensor port |
| 7. | LED |
| 8. | Communication port (To ODU board) |
| 9. | Reserve |
| 10. | 3 Amp Replaceable Fuse |

Figure 13-6

13.10 Error Code Troubleshooting (ODU)

Error Code	Description (Sensor)
P1	High pressure switch (HPS) protection
P5	Condenser coil temperature (T3) protection in cooling
P3	Compressor over current protection

Table 13-6

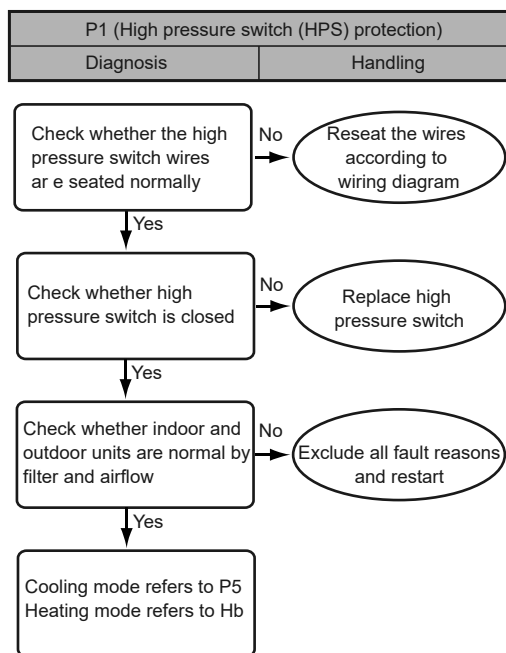


Figure 13-7

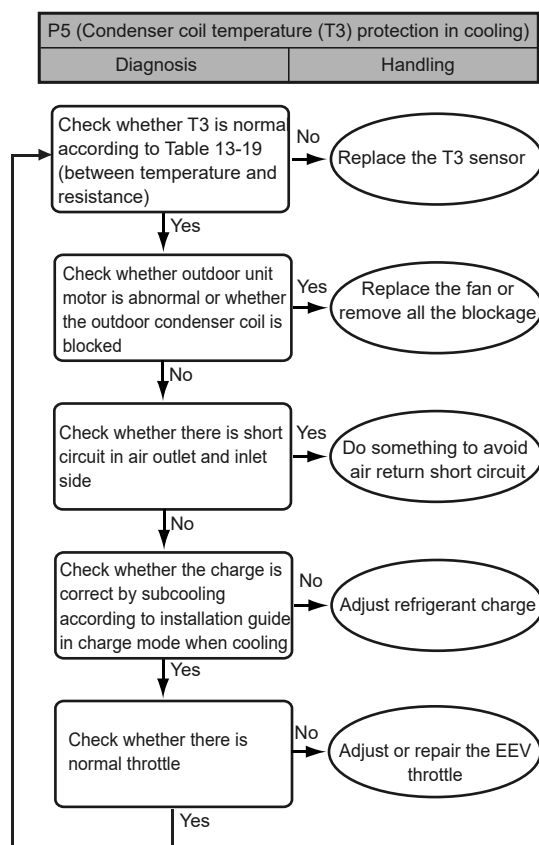


Figure 13-8

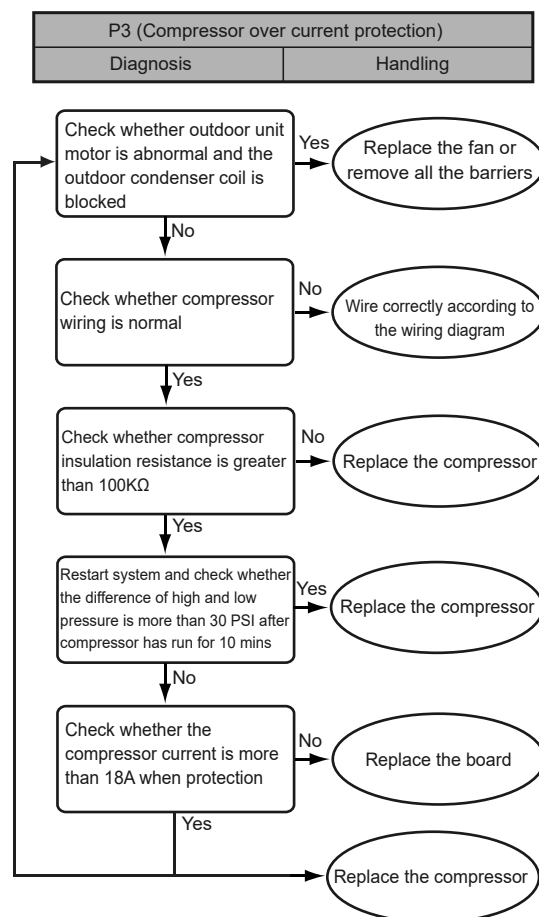


Figure 13-9

Error Code	Description
PH	Low discharge super heat protection
P0	High module radiator temperature (TF) protection

Table 13-7

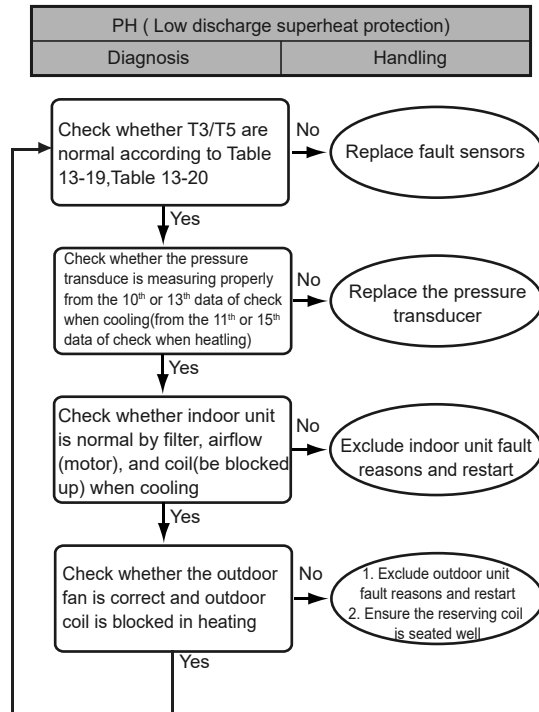


Figure 13-10

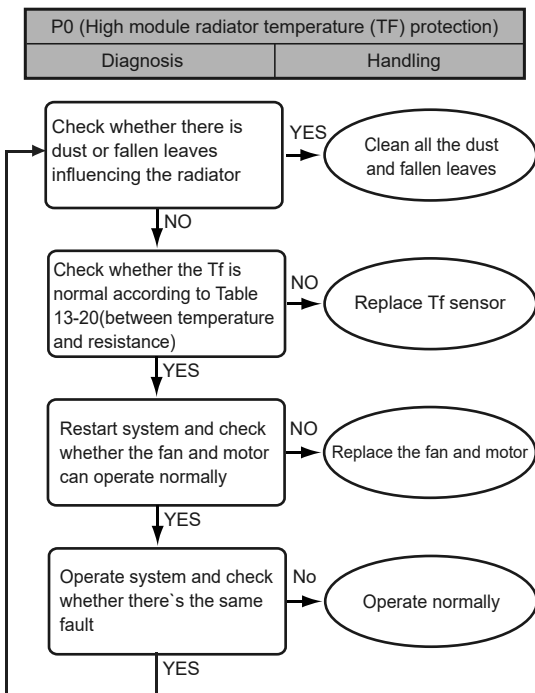


Figure 13-11

Error Code	Description
P2	Low pressure (PT) Protection in cooling and heating
H5	System lockup, 5 times (P2) protection in 100 minutes
P4	High compressor discharge temperature (T5)

Table 13-8

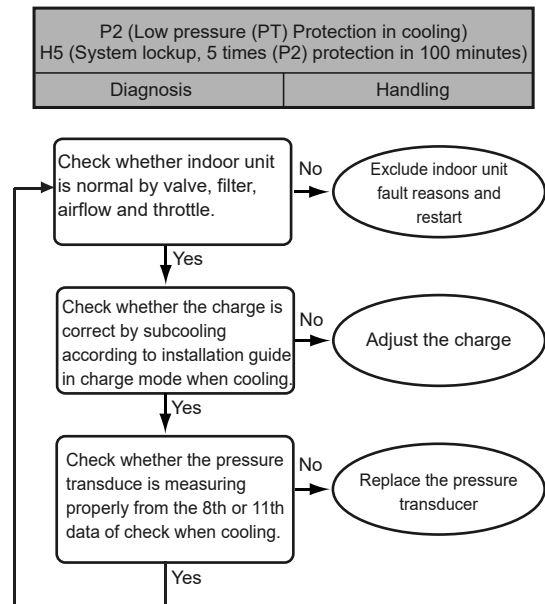


Figure 13-12

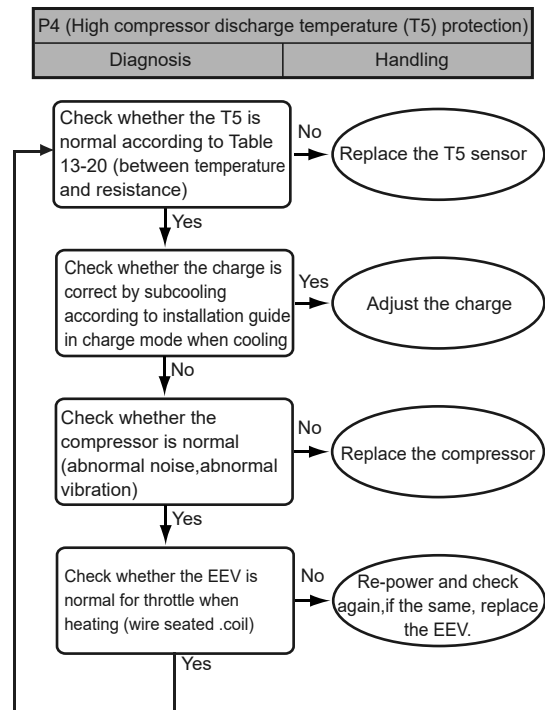


Figure 13-13

Error Code	Description
E4	Temperature sensor fault (T3, T4, T5, Th, T3L)
H8	Pressure transducer (PT) fault
F1	High pressure switch (HPS) fault

Table 13-9

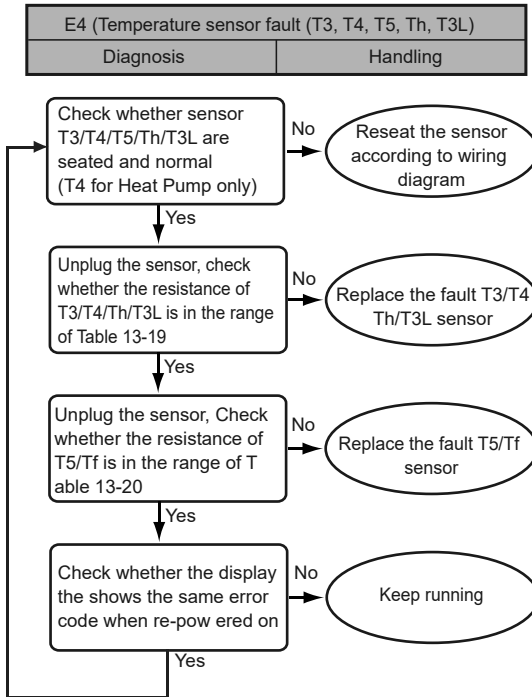


Figure 13-14

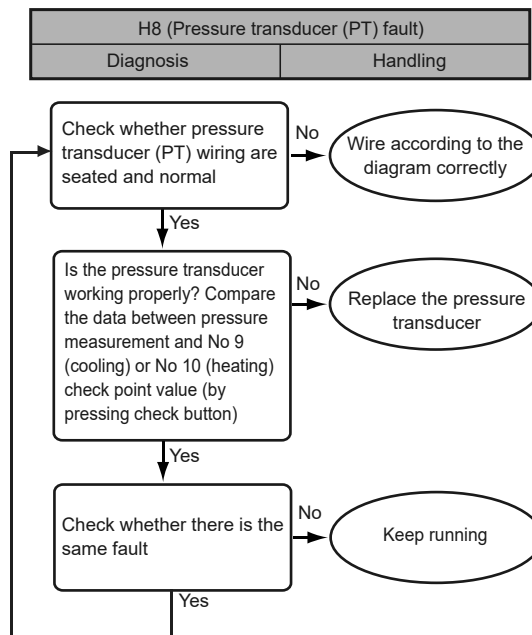


Figure 13-15

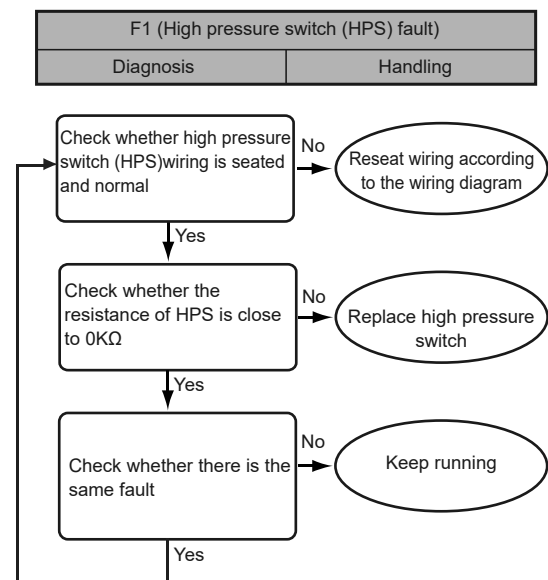


Figure 13-16

Error Code	Description
PC	Evaporator Freeze Protection

Table 13-10

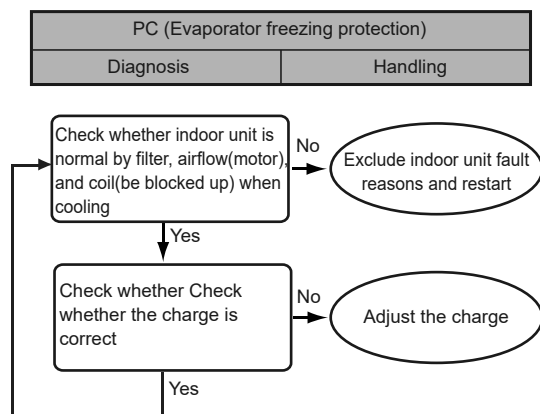


Figure 13-17

Error Code	Description
C3	Condenser coil sensor (T3) is seated fault in cooling
E7	Compressor discharge sensor (T5) is seated fault

Table 13-11

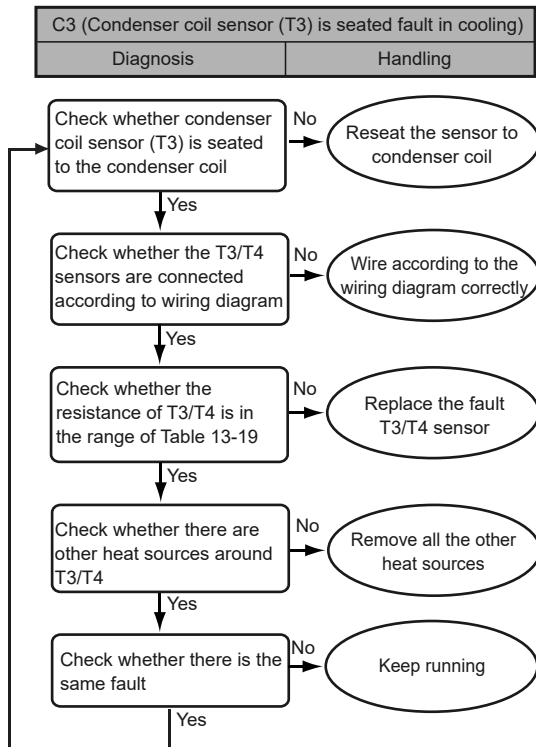


Figure 13-18

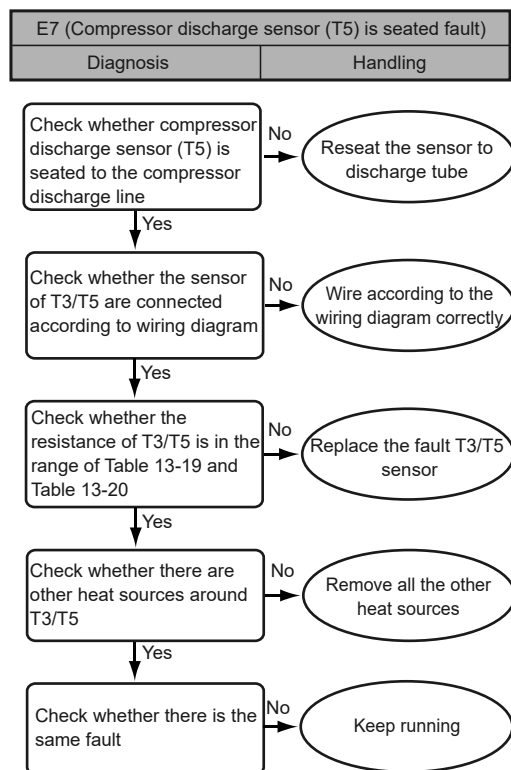


Figure 13-19

Error Code	Description
E6	DC fan motor fault

Table 13-12

If the E6 error code appears occasionally, no action is necessary. The system will restart automatically after 6 minutes.

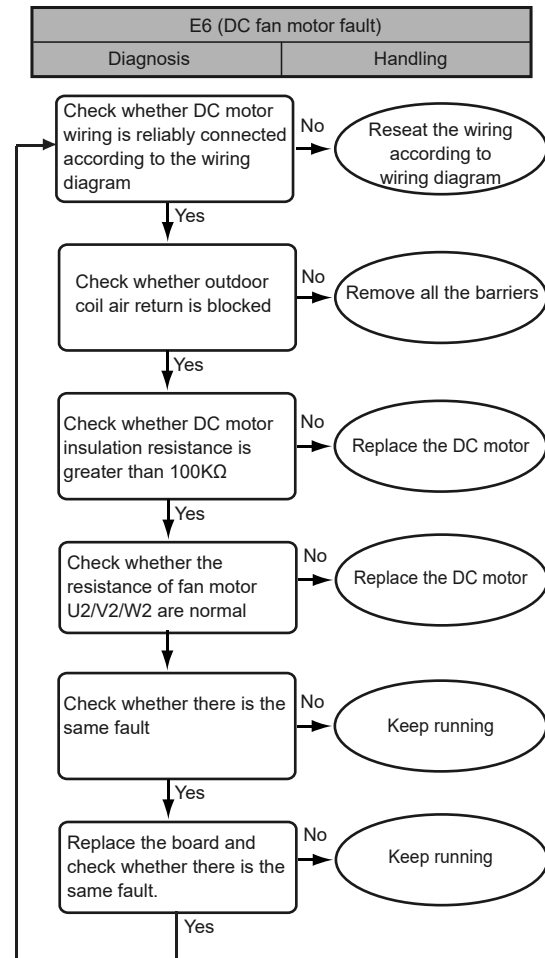


Figure 13-20

Error Code	Description
E9	EEPROM fault
H0	Communication fault in main control chip
E5	High/low voltage protection
E1	Communication error

Table 13-13

If error codes E9/H0/E5 appear occasionally and after the system restarts and runs normally after the power supply is re-established, no action is necessary. Otherwise the system must be checked.

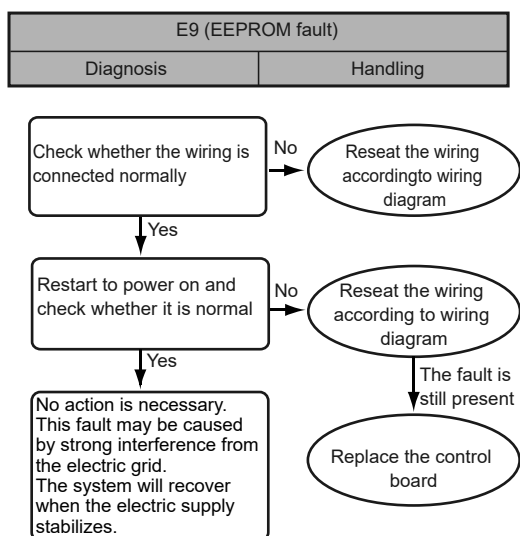


Figure 13-21

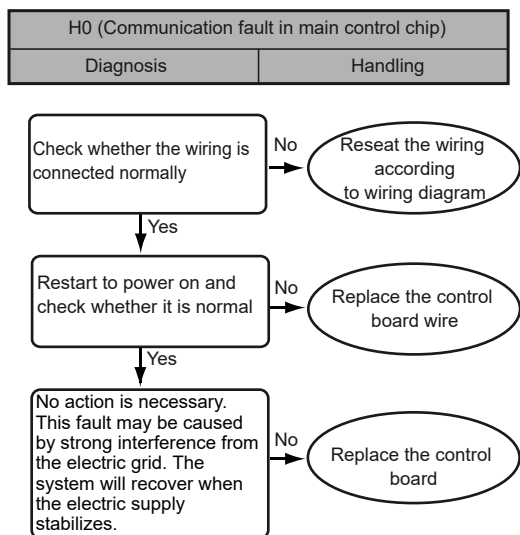


Figure 13-22

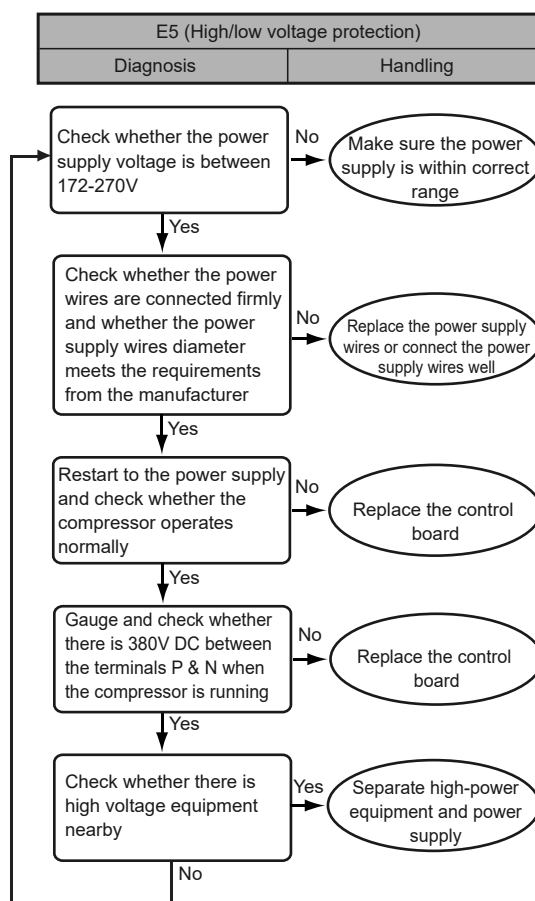


Figure 13-23

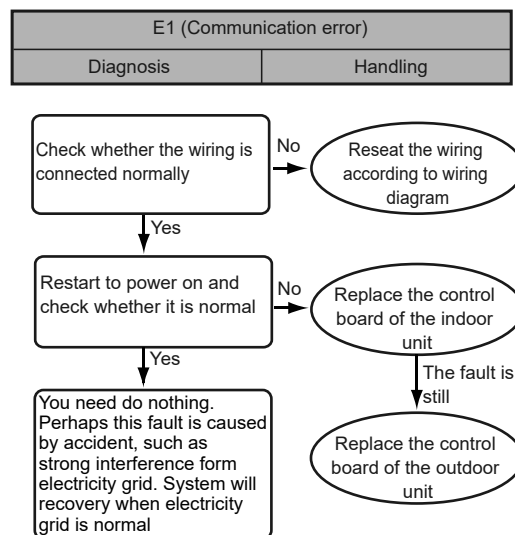


Figure 13-24

Error Code	Description
P6/ L0-L9	IPM module protection

Table 13-14

When error codes L0-L9 appears occasionally, no action is necessary. The system will restart automatically after 6 minutes. Please follow the steps below if L0-L9 appears frequently.

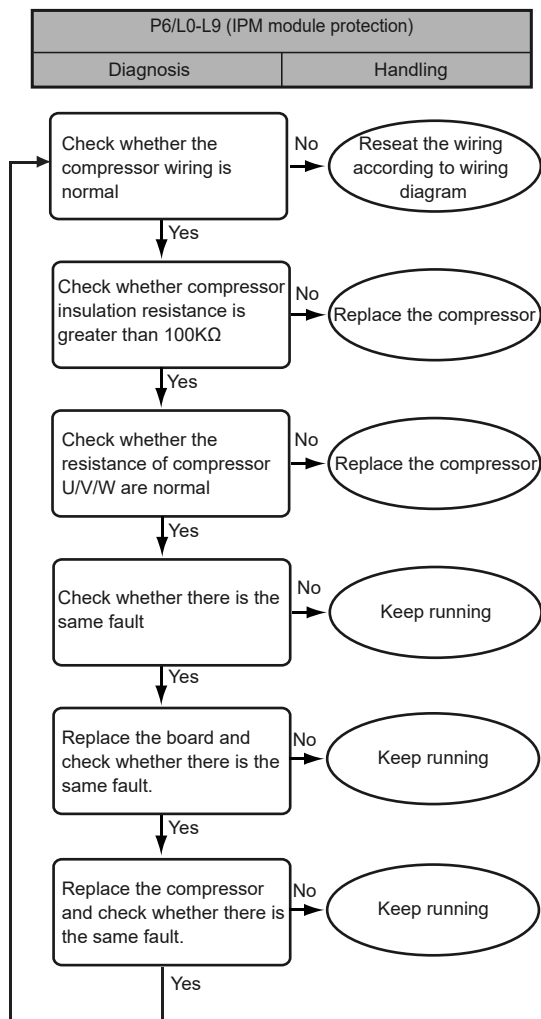


Figure 13-25

Error Code	Description
AtL	Ambient Temperature Limited

Table 13-15

NOTE

When the ambient temperature returns to within the operating range, the system will recover automatically.

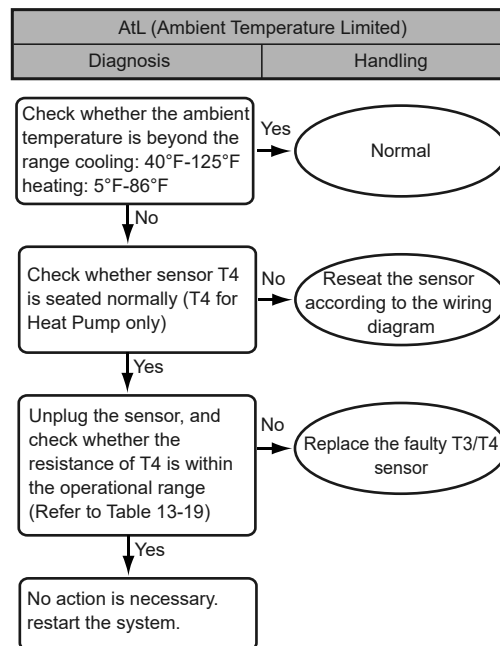


Figure 13-26

Error Code	Description
/	No display on control board

Table 13-16

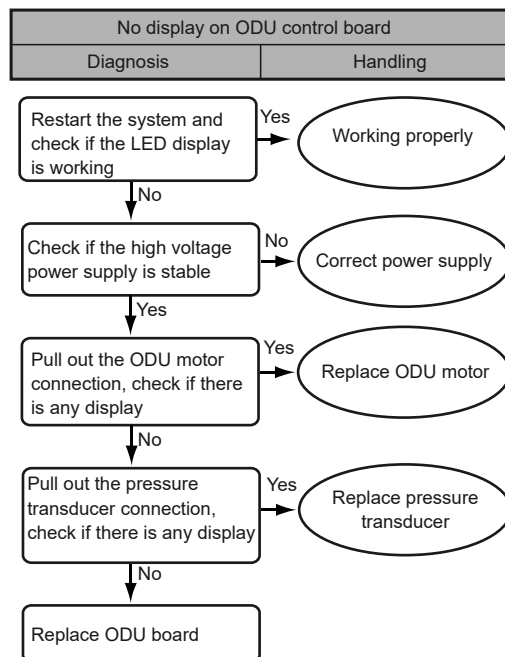


Figure 13-27

13.11 Error Code Troubleshooting (IDU)

Number of flashes	Description (Sensor)
4	Temperature sensor fault (T1)
5	Temperature sensor fault (T2)

Table 13-17

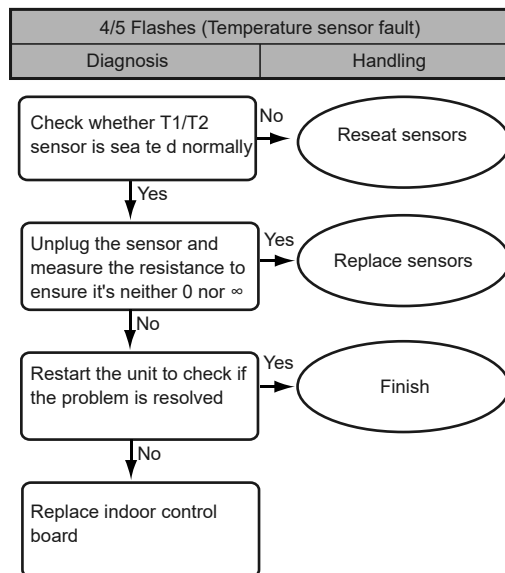


Figure 13-28

Number of flashes	Description (Sensor)
6	Communication error

Table 13-18

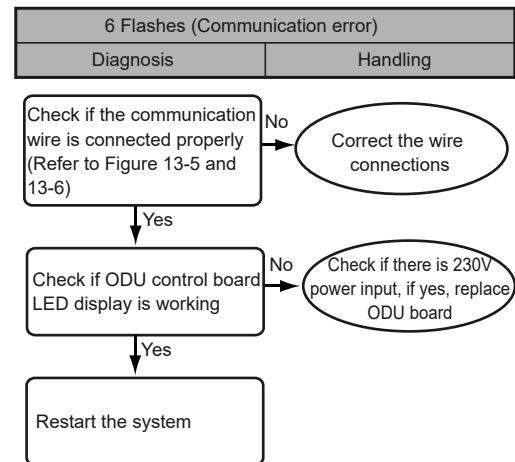


Figure 13-29

13.12 Temperature and Resistance Relationship Tables (for Sensors)

TEMP F	TEMP C	RESISTANCE kΩ	VOLTS DC	TEMP F	TEMP C	RESISTANCE kΩ	VOLTS DC
-5	-20.6	107.732	4.65	90	32.2	7.225	2.36
0	-17.8	93.535	4.60	95	35.0	6.401	2.21
5	-15.0	79.521	4.54	100	37.8	5.683	2.07
10	-12.2	67.795	4.47	105	40.6	5.057	1.93
15	-9.4	57.948	4.39	110	43.3	4.509	1.79
20	-6.7	49.652	4.30	115	46.1	4.028	1.67
25	-3.9	42.645	4.21	120	48.9	3.606	1.55
30	-1.1	36.710	4.10	125	51.7	3.233	1.43
40	4.4	27.386	3.86	130	54.4	2.902	1.32
45	7.2	23.732	3.73	135	57.2	2.610	1.22
50	10.0	20.610	3.59	140	60.0	2.350	1.13
55	12.8	17.939	3.45	145	62.8	2.119	1.04
60	15.6	15.648	3.30	150	65.6	1.914	0.96
65	18.3	13.681	3.15	155	68.3	1.731	0.88
70	21.1	11.987	2.99	160	71.1	1.574	0.82
75	23.9	10.527	2.83	165	73.9	1.416	0.75
80	26.7	9.265	2.67	170	76.7	1.276	0.68
85	29.4	8.172	2.52				


Table 13-19 for T2, T3, T4, Th, T3L

13.13 Temperature and Resistance Relationship Tables (for T5 & Tf)

TEMP F	TEMP C	RESISTANCE kΩ	VOLTS DC	TEMP F	TEMP C	RESISTANCE kΩ	VOLTS DC
-5	-20.6	600.134	4.93	140	60.0	13.643	3.14
0	-17.8	505.551	4.92	145	62.8	12.359	3.03
5	-15.0	427.463	4.91	150	65.6	11.214	2.91
10	-12.2	362.739	4.89	155	68.3	10.227	2.80
15	-9.4	308.891	4.87	160	71.1	9.308	2.68
20	-6.7	265.398	4.85	165	73.9	8.485	2.56
25	-3.9	227.481	4.83	170	76.7	7.746	2.45
30	-1.1	195.601	4.80	175	79.4	7.105	2.34
35	1.7	168.707	4.77	180	82.2	6.504	2.23
40	4.4	146.695	4.74	185	85.0	5.963	2.13
45	7.2	127.258	4.70	190	87.8	5.474	2.02
50	10.0	110.707	4.66	195	90.6	5.032	1.92
55	12.8	96.572	4.61	200	93.3	4.645	1.83
60	15.6	84.465	4.56	205	96.1	4.280	1.73
65	18.3	74.411	4.51	210	98.9	3.949	1.64
70	21.1	65.408	4.45	215	101.7	3.648	1.56
75	23.9	57.634	4.39	220	104.4	3.383	1.48
80	26.7	50.904	4.32	225	107.2	3.133	1.40
85	29.4	45.258	4.24	230	110.0	2.904	1.32
90	32.2	40.152	4.16	235	112.8	2.694	1.25
95	35.0	35.699	4.08	240	115.6	2.503	1.18
100	37.8	31.807	3.99	245	118.3	2.334	1.12
105	40.6	28.398	3.89	250	121.1	2.172	1.06
110	43.3	25.506	3.80	255	123.9	2.024	1.00
115	46.1	22.861	3.70	260	126.7	1.888	0.95
120	48.9	20.529	3.59	265	129.4	1.767	0.90
125	51.7	18.470	3.48	270	132.2	1.651	0.85
130	54.4	16.708	3.37	275	135.0	1.544	0.80
135	57.2	15.085	3.26	280	137.8	1.446	0.76

Table 13-20 for T5 & Tf

13.14 Wiring Diagram

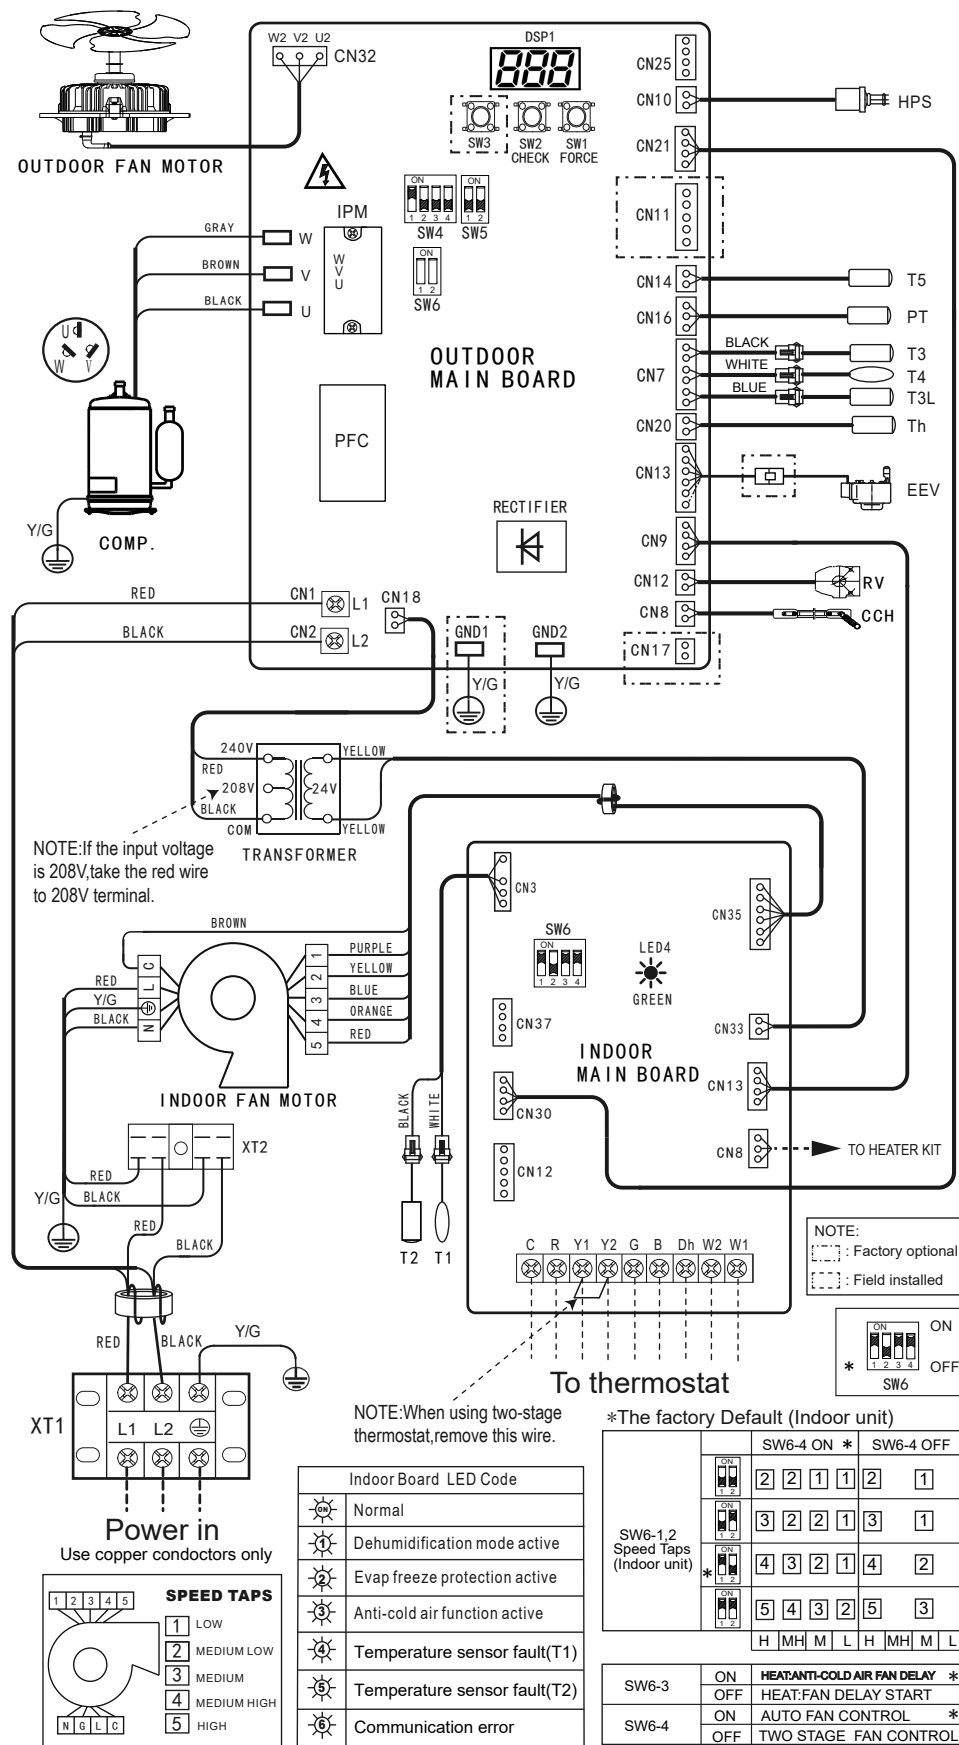




WARNING
ELECTRIC HAZARD 380V VOLTS DC

WAIT 3 MINUTES AFTER DISCONNECTING POWER, THEN
VERIFY DC VOLTAGE LESS THAN 42 VDC AT INVERTER
TEST POINTS P-N. COMPONENTS MAY STORE A
DANGEROUS ELECTRICAL POTENTIAL OF 380 VOLTS DC.

FAILURE TO FOLLOW THIS WARNING COULD RESULT IN
PERSONAL INJURY OR DEATH.

 *The factory Default (Outdoor unit)



SW4-1	ON	Must be set at ON position *
	OFF	Unused
SW4-2	ON	Unused
	OFF	Must be set at OFF position *
SW4-3	ON	Adaptive capacity output disable
	OFF	Adaptive capacity output enable *
SW4-4	ON	Accelerated cooling/heating
	OFF	Normally cooling/heating *

SW5-1 Enter defrost	ON	Operating time is reduced by 10%
	OFF	Normal *
SW5-2 Quit defrost	ON	Defrosting extended for 60 seconds
	OFF	Normal *

SW6 Set capacity (Outdoor unit)	ON OFF	For 24K model
	ON OFF	For 36K model
	ON OFF	For 48K model
	ON OFF	For 60K model

SW3		Wifi setting (Reserve)
CHECK	PRESS 1s	Check the system parameters
	PRESS 6s	Test mode (Not used)
FORCE	PRESS 1s	Forced cooling/heating (Charge mode)
	PRESS 6s	Forced defrosting

CODE	Description
HPS	High pressure switch
T5	Comp. discharge temp. sensor
PT	Pressure transducer
T3	Condensor temp. sensor
T4	Ambient temp. sensor
T3L	Condensor outlet temp. sensor
Th	Comp. return temp. sensor
TF	Control board module temperature
T1	Return air temp. sensor
T2	Indoor coil temp. sensor
EEV	Electric expansive valve
RV	Reversing valve
CCH	Crankcase heater
COMP.	Compressor
TEMP.	Temperature

Factory code	Date	Revision
16027700002615	Feb 14th, 2022	B

Note: This manual is for reference only, actual
product may vary.

CODE	Fault description
C3	The coil sensor is seated fault in cooling(T3)
E4	Temperature sensor fault(T3, T4, T5, Th, T3L)
E5	High/Low voltage protection
E6	DC fan motor fault
E7	Compressor discharge sensor is seated fault (T5)
E9	EEPROM fault
F1	High pressure switch(HPS) fault
H0	Communication fault in main control chip
H5	5 times (P2) protection in 100 minutes, lockup
H8	Pressure transducer fault (PT)
L0-L9	The IPM module protection(only for analysis)
P0	High module temperature protection(TF)
P1	High pressure protection (HPS)
P2	Low pressure protection in cooling or heating (PT)
P3	Compressor over current protection
P4	High T5 protection
P5	Condensor coil temperature protection in cooling (T3)
P6	IPM module protection
P8	DC fan motor hurricane/typhoon protection
PH	Low discharge superheat protection
AtL	Ambient Temperature Limited T4 (heat pump)
PC	Evaporator freezing protection
E1	Communication error

CODE	Description
I	Forced operation mode
L	Running indication under T3 limited condition
D	Running indication under T5 limited condition
P	Compression ratio protection limit
F	Running indication under TF limited condition
C	Running indication under current limited condition
U	Running indication under low voltage limited condition
A	Running indication under return oil model
dF	Running indication under defrost model

Number	Point check content
0	Outdoor unit capacity, example: H3=Heat pump 3 ton
1	Outdoor unit mode: 0-standby, 2-cooling, 3-heating
2	Outdoor unit set compressor speed(Hz)
3	T3: outdoor coil temp.(°F)
4	T4: outdoor ambient temp.(°F)
5	T5: compressor discharge temp.(°F)
6	Th: compressor suction temp.(°F)
7	T3L: (liquid line temp.)(°F)
8	TF: module temp.(°F)
9	Pe: evaporating pressure(PSI)
10	Pc: condensing pressure(PSI)
11	Tes: target evaporating temp.(only for cooling mode)(°F)
12	Te: evaporating temp.(°F)
13	Tcs: target condensing temp.(only for heating mode)(°F)
14	Tc: condensing temp.(°F)
15	Target of the compressor discharge superheat (heating mode only): Target value (°F)
16	Compressor discharge superheat(°F)
17	Opening of EEV: Actual value
18	Outdoor fan speed
19	Compressor current(A)
20	Power AC voltage Input(V)
21	DC voltage(V)
22	Continuous running time of the compressor(min)
23	Last fault code
24	Software version
25	T1: Return air temp.(°F)
26	T2: Indoor coil temp.(°F)
27	Indoor fan speed
28	Ts: Assume thermostat set point temp.(°F)
29	Remark" --"

14 MAINTENANCE

NOTE

For continuing high performance and to minimize possible equipment failure, periodic maintenance must be performed on this equipment.

14.1 Cleaning Precautions

WARNING

Any unit repairs must be performed by qualified service personnel only.

WARNING

ELECTRICAL SHOCK

Always turn off your heat pump and disconnect its power supply before cleaning or maintenance.

CAUTION

When removing filter, do not touch metal parts in the unit. The sharp metal edges can cut you.

NOTICE

- Do not use chemicals or chemically treated cloths to clean the unit .
- Do not use benzene, paint thinner, polishing powder or other solvents to clean the unit.
- Do not operate the system without a filter in place

14.2 Regular Maintenance

Your heat pump must be inspected regularly by a qualified service technician.

1. Inspect the air filter every ninety days or as often as needed. If blocked or obstructed, clean or replace at once.

Your annual system inspection must include:

2. Inspection and/or cleaning of the blower wheel housing and motor.
3. Inspection and cleaning of indoor and outdoor coils as required.
4. Inspection and/or cleaning of the indoor coil drain pan and drain lines, as well as auxiliary drain pan and lines.
5. Check all electrical wiring and connections. Correct as needed, referring to the wiring diagram. (Refer to Figure 13-27)

PÓLIZA DE GARANTÍA

Atención: Leer cuidadosamente el manual de mantenimiento e instalación y ponerlos en práctica, le brindará lo necesario para un funcionamiento adecuado de su equipo. Para validar la garantía favor de acudir directamente con el distribuidor autorizado que le vendió este equipo.

Se validará la garantía bajo las siguientes condiciones:

Cláusulas

1. Requisitos. Para validar su garantía, se deberá presentar la póliza debidamente sellada por distribuidor autorizado que vendió este producto o en su caso, copia respectiva de la factura o recibo que acredite la compra-venta de su unidad.
2. Producto. Esta póliza de garantía es exclusivamente para el producto adquirido y cuyo número de serie está identificado tanto en unidades exterior (condensadora) e interior (evaporadora), así como en los empaques de los mismos. Se recomienda conservar estas etiquetas para futuras aclaraciones.
3. Vigencia y alcance. La vigencia de esta póliza de garantía es de 3 meses en partes electrónicas (tarjetas, display y control remoto), 12 meses en el resto de partes (motores, aspas, serpentines, compresor, etc), a partir de la adquisición del producto; se extiende única y exclusivamente a fallas o defectos de fabricación.
4. La instalación, reparación y manipulación de esta unidad deberá ser realizada por personal calificado y autorizado por nuestras marcas.

La garantía de este producto no será válida en las siguientes situaciones:

- a) Cuando el producto haya sido instalado de manera diferente a la que se expresa en este manual.
- b) Cuando el producto haya sufrido daños por problemas climatológicos, ambientales o desastres naturales.
- c) Cuando presente daños en su estructura debido al mal manejo de la unidad.
- d) Cuando el producto sea destinado para fines distintos a los indicados en el manual.
- e) Cuando el producto no sea instalado y/o utilizado de acuerdo a las especificaciones que se indican en el manual de usuario.
- f) Cuando el producto sea instalado, alterado o reparado por personal no autorizado por la marca.
- g) Cuando el producto no se encuentre el periodo de garantía especificado en esta póliza.
- h) Por la implementación de accesorios que no correspondan a la marca.
- i) Cuando el producto sea instalado para fines comerciales y no domésticos.
- j) Cuando la unidad sea desinstalada.

Refacciones

1. Las refacciones y componentes empleados para la reparación de su unidad no tendrán costo extra únicamente cuando estén sujetos a esta póliza de garantía, de igual forma se cubrirán los gastos de transportación y mano de obra que se deriven del fallo que se presente.
2. El consumidor puede obtener partes, componentes, consumibles y accesorios con el distribuidor autorizado que vendió en la zona.

Atención y servicio. Esta garantía podrá ser atendida únicamente por el distribuidor que vendió el producto. Cuando el producto se haya adquirido en cadenas comerciales, la garantía se hará válida en los centros de servicio autorizados, mismos publicados en www.unitedappliances.com. Para más información llame al Tel. 800-788-4040 o comuníquese vía correo electrónico: soporte.tecnico@unitedappliances.com, Por estos medios se le brindará la información que se requiera.

ALLOSTE S.A DE C.V se deslinda de responsabilidad alguna al momento en que se presente un fallo en el equipo por instalaciones defectuosas o erróneas realizadas por personal no autorizado.



**CENTROS DE ATENCIÓN
DIRECTA A CLIENTES:**

(Distribuidor / Comercializador Autorizado)
Sello de Garantía del Distribuidor

DATOS DE DISTRIBUIDOR / COMERCIALIZADOR AUTORIZADO:

Razón Social: _____

Dirección: _____

DATOS DEL ARTÍCULO:

Marca: _____

Modelo: _____


FIRMA DEL TÉCNICO INSTALADOR:

Nombre: _____

E-Mail: _____

Teléfono: _____

	
ACONDICIONADOR DE AIRE	
TIPO PAQUETE SUBTIPO INVERTER	
MARCA: UA HVAC SYSTEMS	
MODELO: UADRTC036DD300E1/O	
1 FASE	208/230V ~ 60Hz
CAPACIDAD DE ENFRIAMIENTO:	36 010 BTU/h
AMPERAJE MÍNIMO DEL CIRCUITO:	25,1 A
FLUJO DE AIRE NOMINAL:	2 210 m³/h
MAX. PRESIÓN ESTÁTICA EXTERIOR:	200 Pa
REFRIGERANTE:	R410A
PRESIÓN DE OPERACIÓN (ALTA / BAJA):	3,79 / 1,72 MPa
CARGA DE REFRIGERANTE:	2,6 kg
HECHO EN CHINA	
IMPORTADO POR: ALLOSTE, S.A. DE C.V. Boulevard Insurgentes No. 18302-3, Colonia El Lago. Tijuana, B.C., México, C.P. 22210. R.F.C.: ALO201127UZ4 Tel: +52 (664) 830-1323	
MUY IMPORTANTE: DEBE SER OPERADO POR UN ADULTO NO DEBE SER OPERADO POR UN MENOR Ó GENTE CON CAPACIDADES DIFERENTES. ESTE APARATO NO ES UN JUGUETE VER INSTRUCTIVO ANEXO	
www.uahvacsystems.com	

	
ACONDICIONADOR DE AIRE	
TIPO PAQUETE SUBTIPO INVERTER	
MARCA: UA HVAC SYSTEMS	
MODELO: UADRTC060DD300E1/O	
1 FASE	208/230V ~ 60Hz
CAPACIDAD DE ENFRIAMIENTO:	57 000 BTU/h
AMPERAJE MÍNIMO DEL CIRCUITO:	41,8 A
FLUJO DE AIRE NOMINAL:	3 060 m³/h
MAX. PRESIÓN ESTÁTICA EXTERIOR:	200 Pa
REFRIGERANTE:	R410A
PRESIÓN DE OPERACIÓN (ALTA / BAJA):	3,79 / 1,72 MPa
CARGA DE REFRIGERANTE:	3,6 kg
HECHO EN CHINA	
IMPORTADO POR: ALLOSTE, S.A. DE C.V. Boulevard Insurgentes No. 18302-3, Colonia El Lago. Tijuana, B.C., México, C.P. 22210. R.F.C.: ALO201127UZ4 Tel: +52 (664) 830-1323	
MUY IMPORTANTE: DEBE SER OPERADO POR UN ADULTO NO DEBE SER OPERADO POR UN MENOR Ó GENTE CON CAPACIDADES DIFERENTES. ESTE APARATO NO ES UN JUGUETE VER INSTRUCTIVO ANEXO	
www.uahvacsystems.com	



IMPORTADO POR:

ALLOSTE, S.A. DE C.V.

Blvd. Insurgentes #18302-3 Col. El Lago

C.P. 22210 Tijuana. B.C. México.

R.F.C. ALO201127UZ4
